


QUICKSTART GUIDE




Miss **ILLINOIS**


1. Charge the Batteries

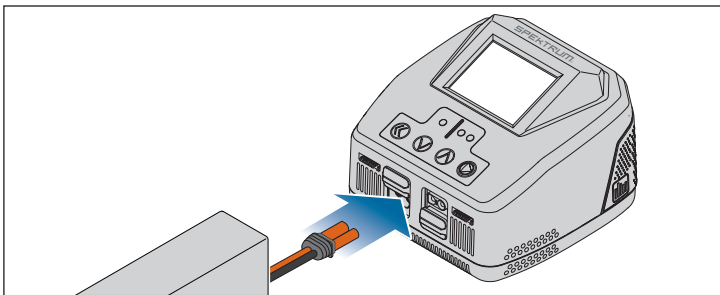


3. Install the Batteries into the (SSL) Battery Tray

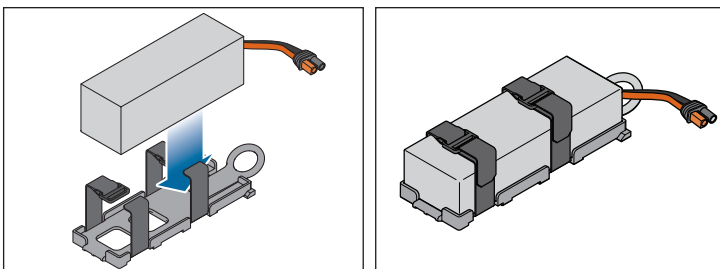


4. Power On the Transmitter

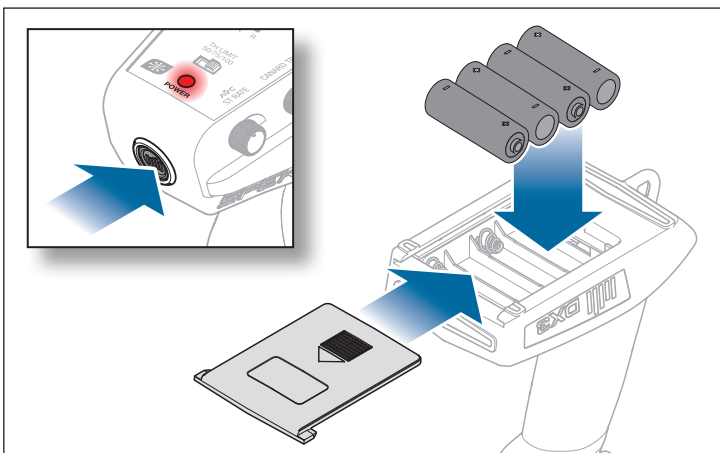


6. Power On the Boat

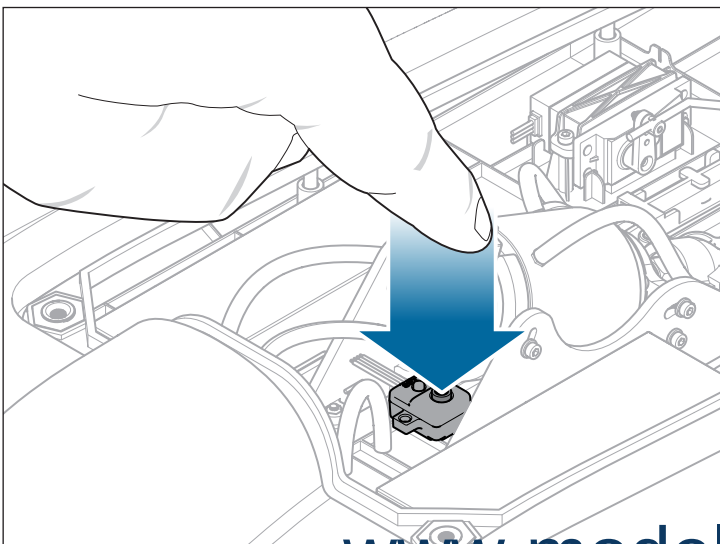


2. Remove the Canopy and SSL Battery Tray

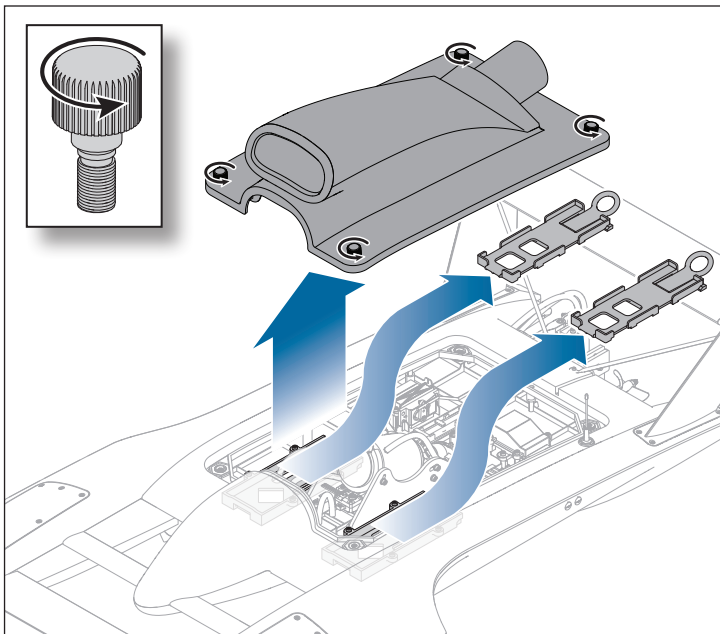


5. Install the Batteries

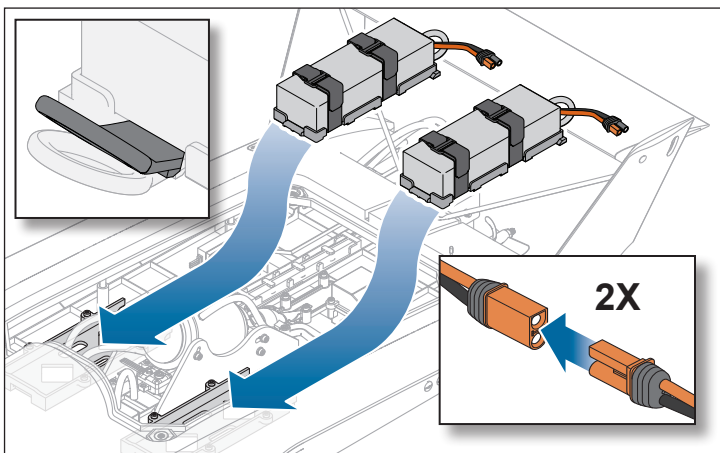


7. Install the Canopy

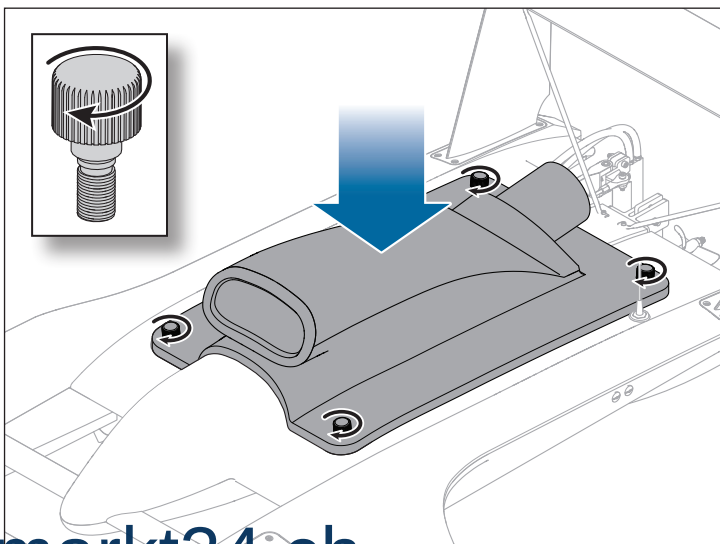


8. Throttle/Reverse

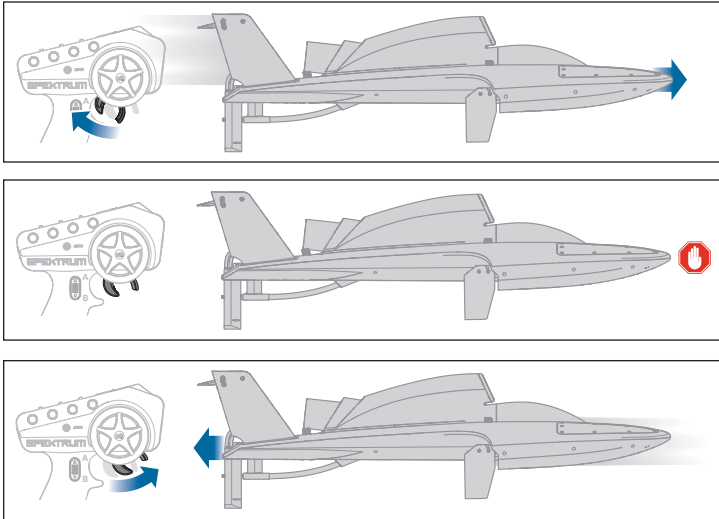


9. Steering Rate

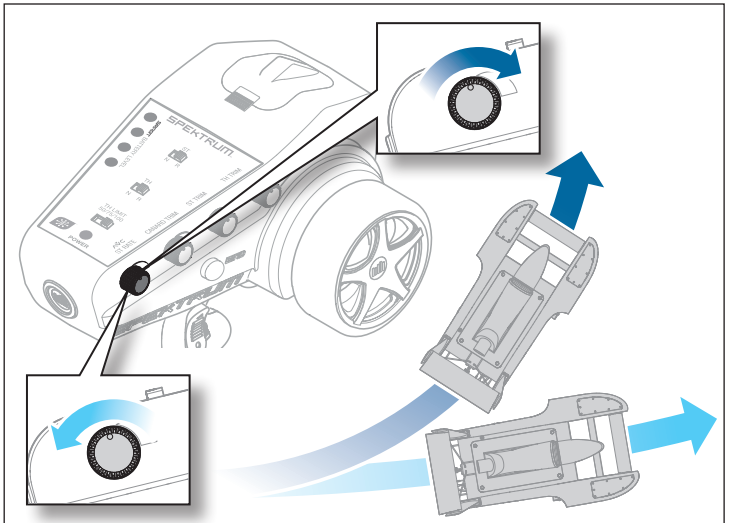

10. Steering


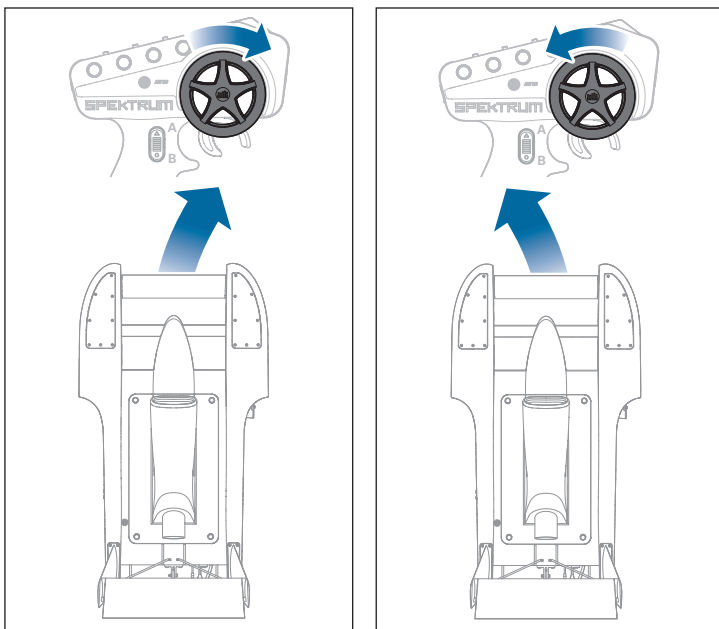


11. Steering Trim


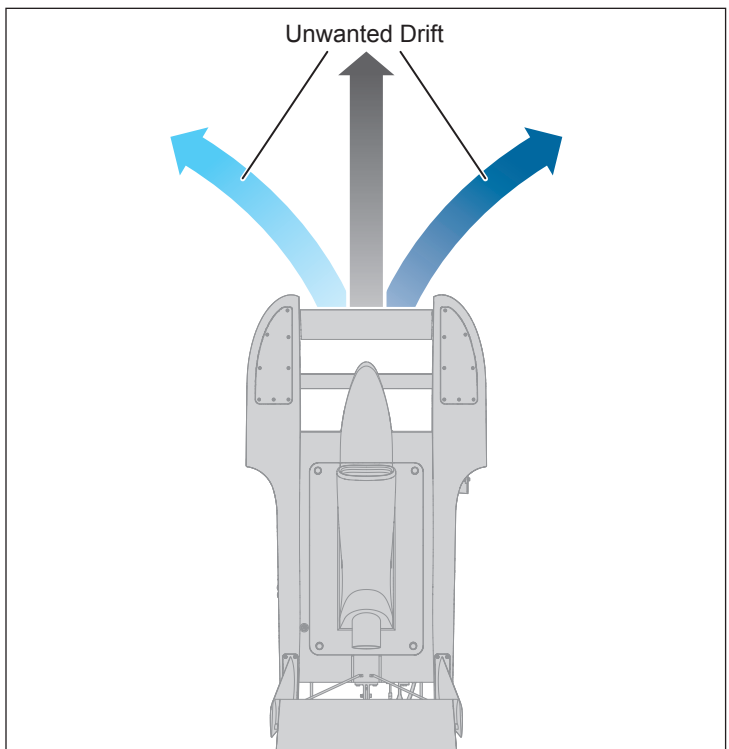


Adjust as shown until boat tracks straight


12. Throttle Limiter

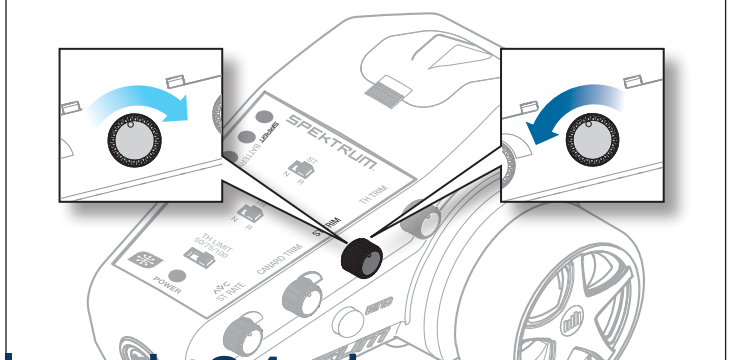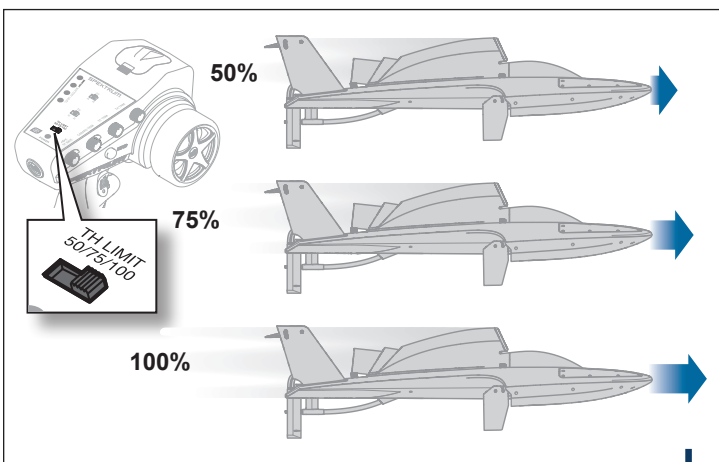


13. Canard Adjustment

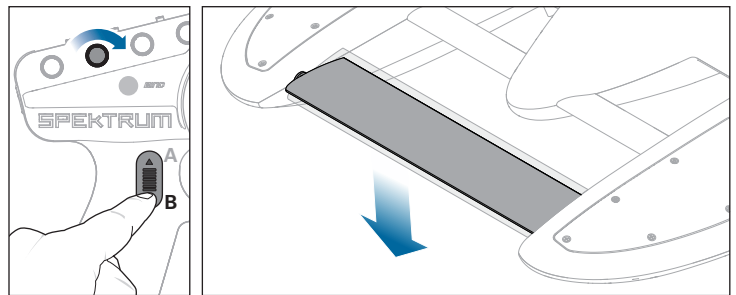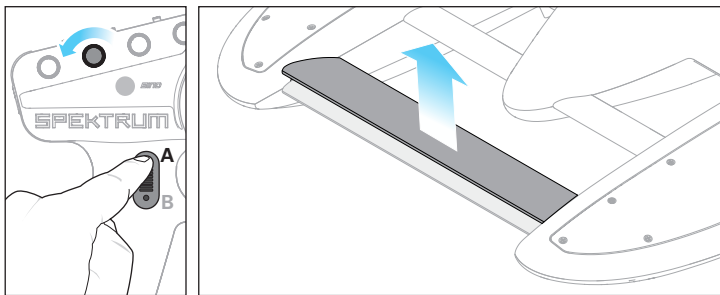


14. Remove the Canopy

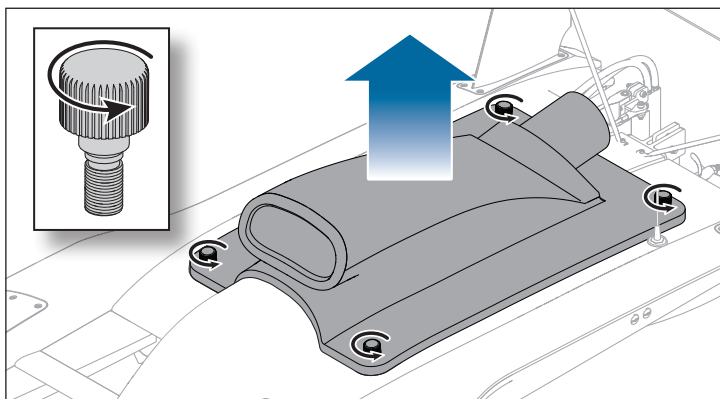

15. Power Off the Boat

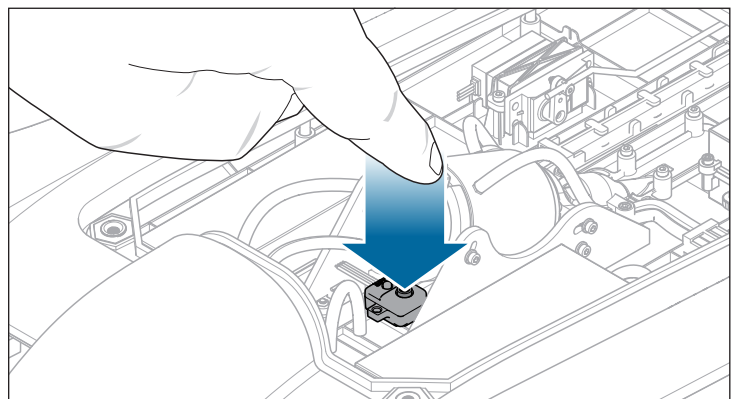


16. Remove the Batteries

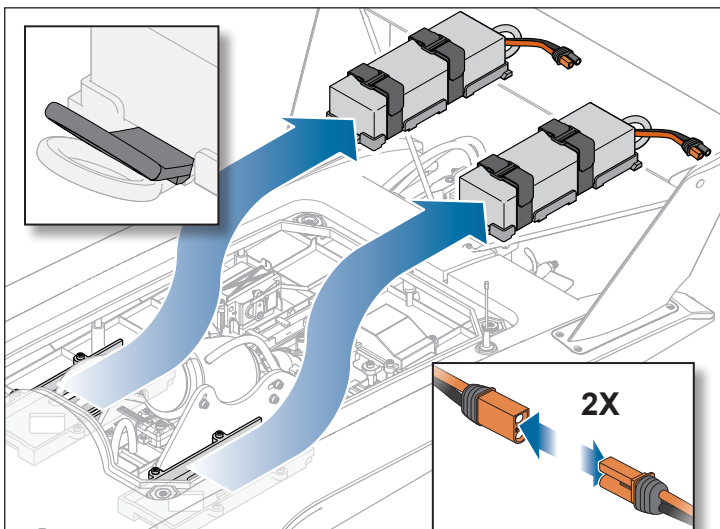


CAUTION: NEVER leave the battery connected to the boat when not in use. Damage to the battery may result.

17. Drain Water from the Hull

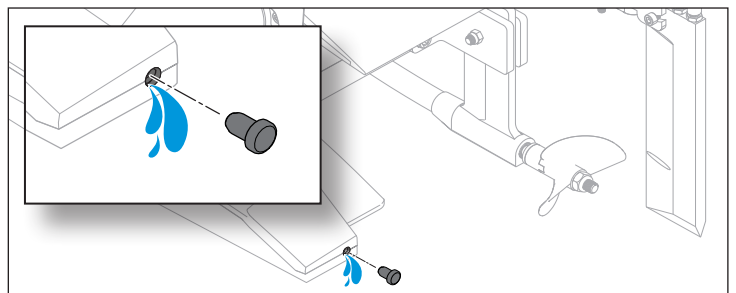

18. Power Off the Transmitter

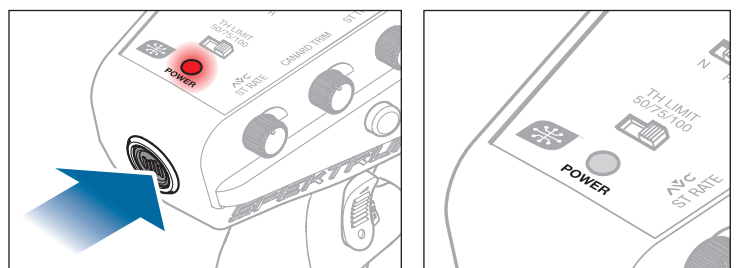

Scan the QR code and select the Support tab from the product page for the most up-to-date manual information.



PRB-2072

©2026 Horizon Hobby, LLC.

Pro Boat, DX3, IC5, Firma, and the Horizon Hobby logo are trademarks or registered trademarks of Horizon Hobby, LLC.

The Spektrum trademark is used with permission of Bachmann Industries, Inc.

All other trademarks or registered trademarks are property of their respective owners. Other patents pending.

Created 4/26

1232178