
INSTRUCTION MANUAL
AX90048-I001

READY-TO-RUN

RR10™ BOMBER

1/10th SCALE ELECTRIC 4WD

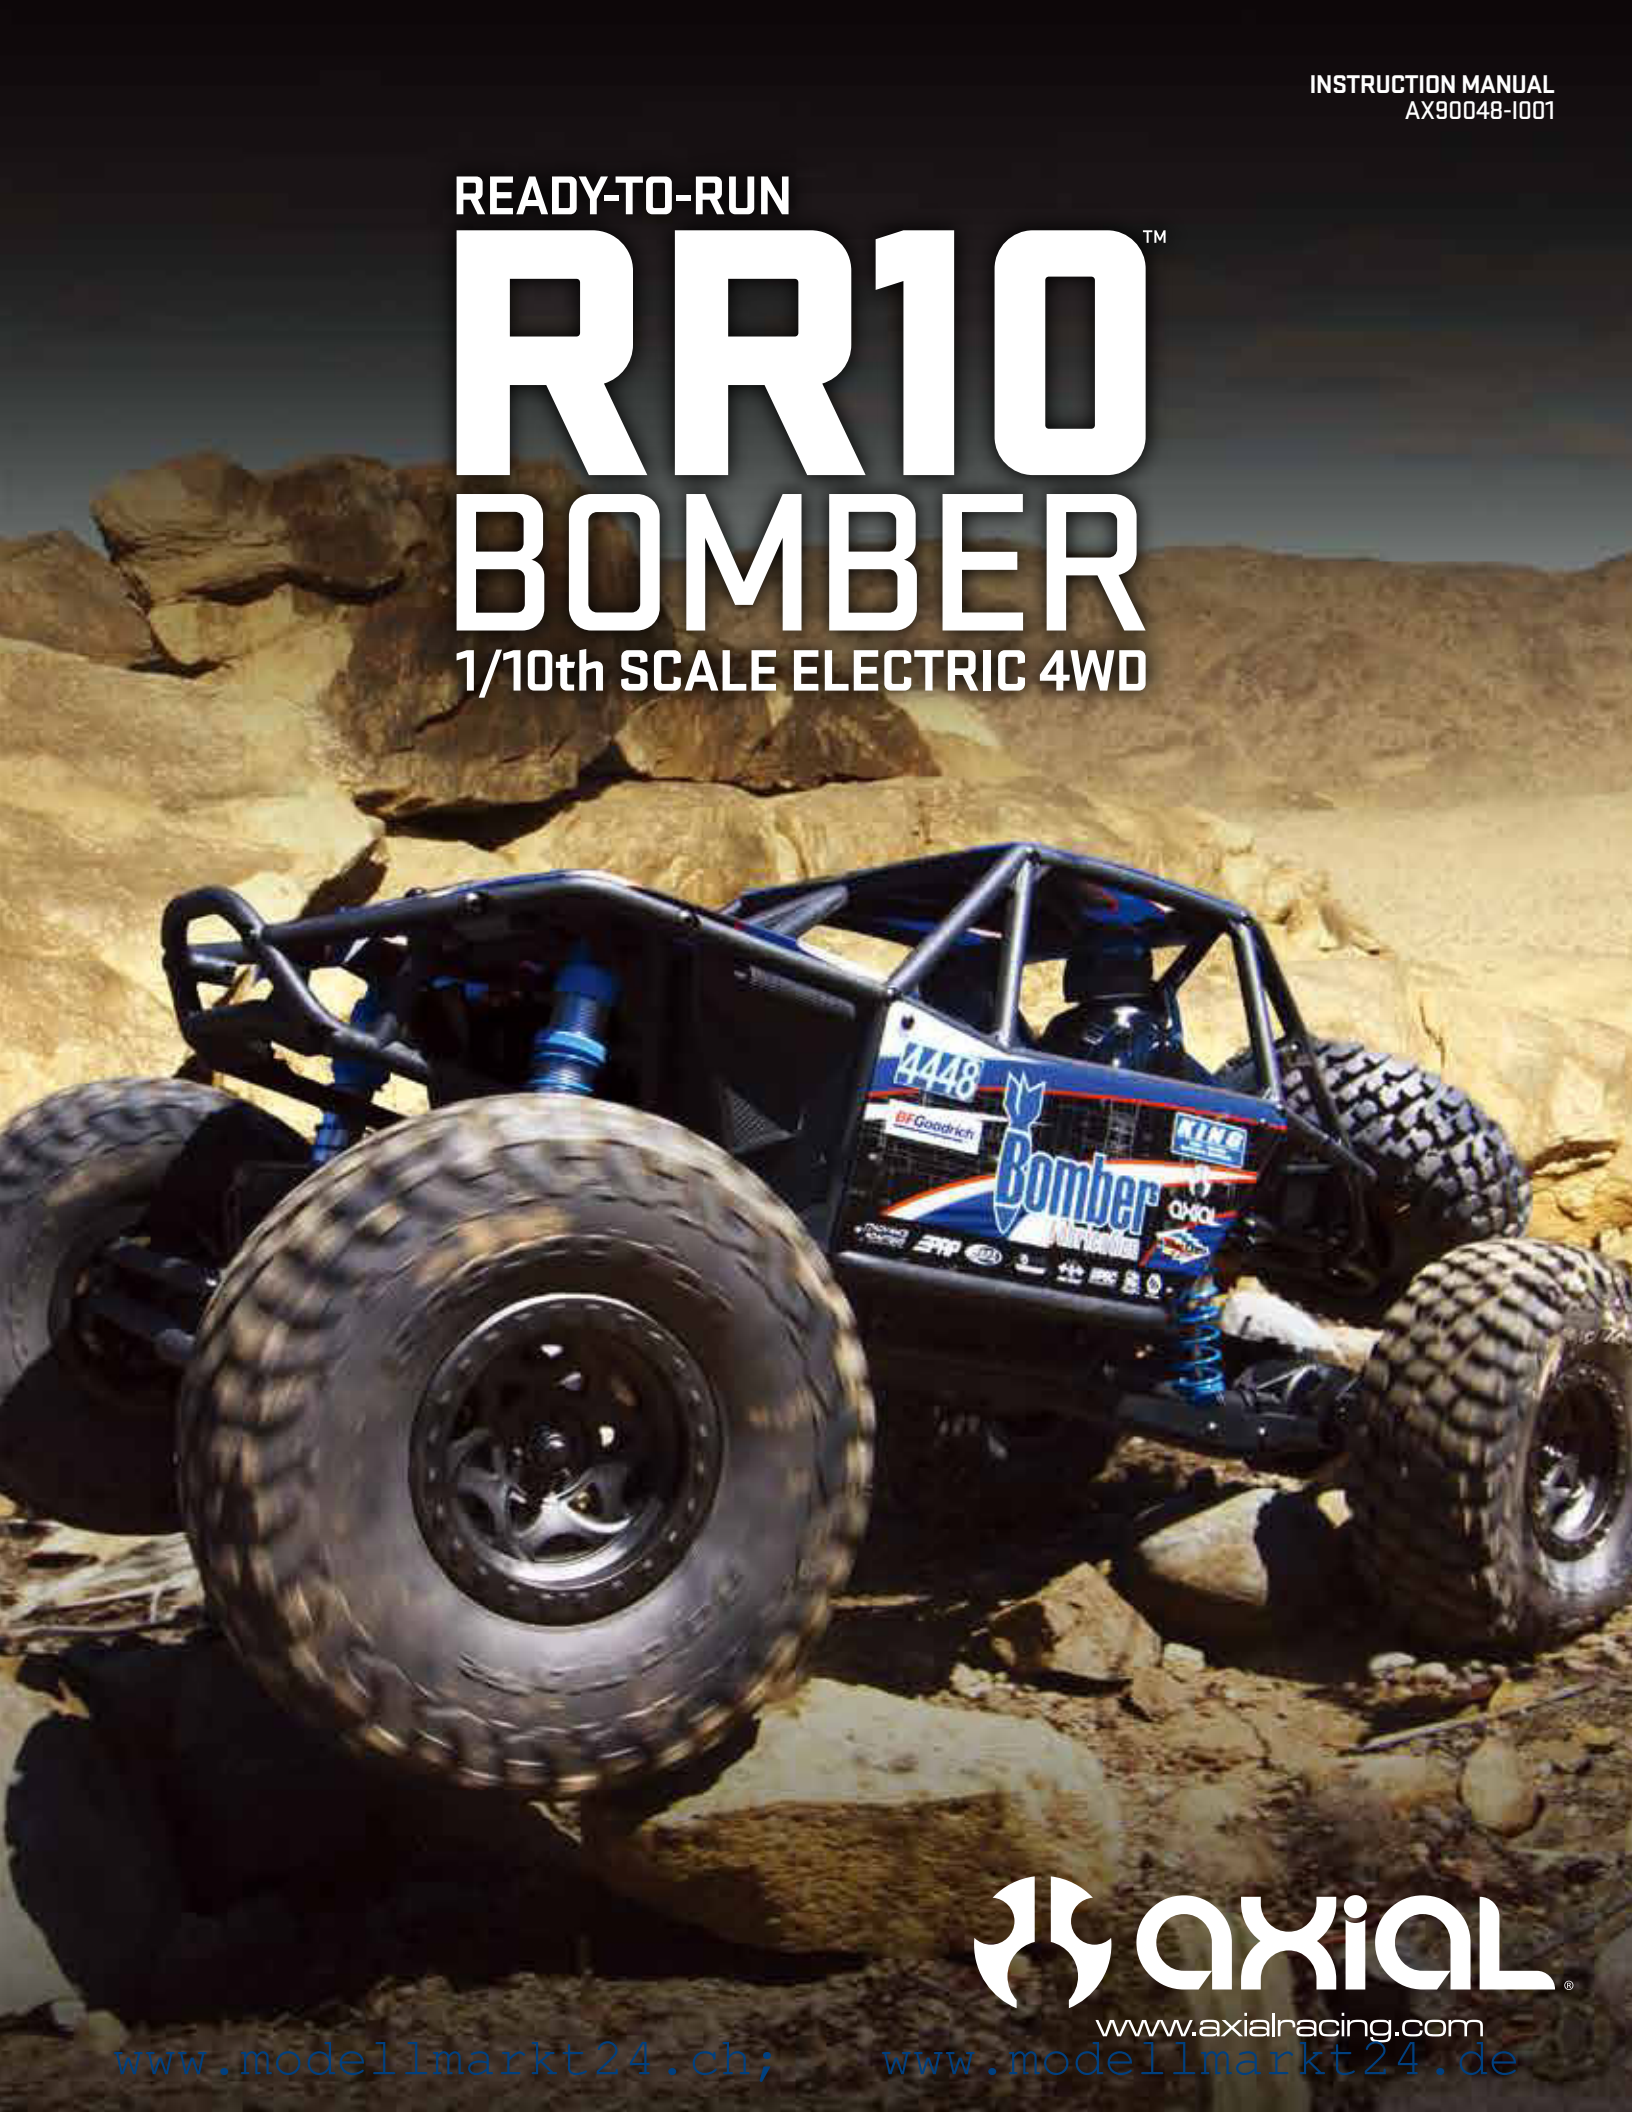

axial®

www.axialracing.com

www.modellmarkt24.ch; www.modellmarkt24.de

CAUTIONS

⚠ To prevent serious personal injury and/or property damage, operate all remotely controlled models in a responsible manner as outlined herein.

CHOOSE THE RIGHT PLACE TO OPERATE YOUR R/C MODEL.
- Do not run on public streets or highways. This could cause serious accidents, personal injuries, and/or property damage.
- Never run R/C models near people or animals.
- To avoid injury, do not run in confined spaces.
- Do not run where loud noises can disturb others, such as hospitals and residential areas.
- Never run indoors. There is a high risk of fire and/or damage.

INSPECT YOUR MODEL BEFORE OPERATION.
- Make sure that all screws and nuts are properly tightened. It is also a good idea to use removable thread lock wherever metal screws go into metal, especially for engine mounts and the engine pilot shaft.
- Always use fresh batteries for your transmitter and for your receiver to avoid losing control of the model.
- Always test the brakes and throttle before starting your engine to avoid losing control of the model.

AFTER OPERATION OF YOUR R/C MODEL
- Disconnect battery in vehicle first, then turn off transmitter, this will prevent runaways.
- Be careful when handling batteries, they will be hot after running.
- Replace any batteries that have been dented or have frayed wires, short circuits can cause fire.
- Be sure to keep your R/C model clean and free of excess dirt and grease, this will increase the life.

VORSICHT!

⚠ Um Verletzungen an Personen und/oder Sachschäden zu vermeiden, sollten alle ferngesteuerten Modelle sorgfältig und verantwortungsbewusst bedient werden,wie nachfolgend beschrieben.

Wählen Sie den richtigen Platz zum Fahren
- Fahren Sie niemals auf öffentlichen Straßen. Dies könnte Verkehrsunfälle, Personen schäden oder Sachschäden verursachen.
- Fahren Sie niemals in der Nähe von anderen Personen oder Tieren.
- Fahren Sie niemals auf belebten Straßen.
- Fahren Sie nie in der Nähe von Wohnhäusern oder Krankenhäusern. Der Lärm könnte andere Personen stören.
- Fahren Sie niemals in Innenräumen. Dort könnte etwas beschädigt werden.

Überprüfen Sie Ihr Modell, bevor Sie es in Betrieb nehmen.
- Gehen Sie sicher, dass alle Schrauben und Muttern festgezogen sind. Verwenden Sie überall dort Schrauben-Sicherungslack, wo Metallschrauben in ein Metallgewinde greifen, besonders bei den Motorhaltern.
- Um Störungen zu vermeiden, benutzen Sie immer voll geladene Akkus in Ihrem Sender und Empfänger.
- Bevor Sie den Motor starten, sollten Sie immer die Funktion der Bremse und des Gashebels testen.

Nach Betrieb des RC Modells:
- Zuerst den Empfänger abdrehen, dann den Sender abdrehen um unkontrolliertes Durchgehen zu vermeiden.
- Seien Sie vorsichtig mit gebrauchten Akkus, sie können nach dem Gebrauch heiß sein.
- Ersetzten Sie Akkus/Batterien die beschädigt sind oder schadhafte Kabel aufweisen, sie können Kurzschlüsse oder Feuer verursachen.
- Halten Sie Ihr Fahrzeug sauber und entfernen Sie Schmutz und Schmierfett, damit erhöhen Sie die Lebensdauer Ihres Modells.

PRECAUTIONS

⚠ Afin d'éviter toutes blessures corporelles et/ou dommages environnants, veuillez procéder en toute responsabilité comme indiqué ci-dessous

Choisir le lieu adéquat pour faire rouler votre modèle.
- Ne jamais rouler dans les rues ou sur les routes ouvertes au publique. Ceci peut provoquer de graves accidents.
- Ne jamais rouler près de personnes ou d'animaux.
- Pour éviter les blessures, ne pas rouler dans des espaces confinés.
- Ne jamais rouler où le bruit peut déranger, comme aux abords des hôpitaux ou des quartiersrésidentiels.
- Ne jamais rouler à l'intérieur: les gaz d'échappement sont nocifs.


Controler votre modèle avant chaque utilisation.
- Vérifier que les vis et les écrour sont bien serrés. Il est trés fortement conseillé d'utiliser du frein filet pour bloquer les vis qui sont en contact avec du métal et tout particulierer ment les vis du moteur.
- Toujours utiliser des batteries bien chargées pour l'émission et la réception.
- Toujours vérifier les freins et la commande des gaz avant de démarrer.


Après l'Opération De Votre Modèle de R/C
- Le virage du récepteur premier, alors virage de l'émetteur, ceci empêchera des fugitifs.
- Faire attention en contrôlant des piles, ils auront chaud après avoir couru.
- Remplacer n'importe quelles piles qui ont été cabossées ou a éraillé des fils, les court-circuits peuvent causer le feu.
- Etre sûr de garder votre modèle de R/C nettoie et libère de terre et la graisse supplémen taires, ceci augmentera la vie.

www.modellmarkt24.ch; www.modellmarkt24.de

Included items / Im Baukasten enthalten / Outils inclus dans le kit

Radio control car
Ferngesteuertes Modellauto
Voiture radio-commandée

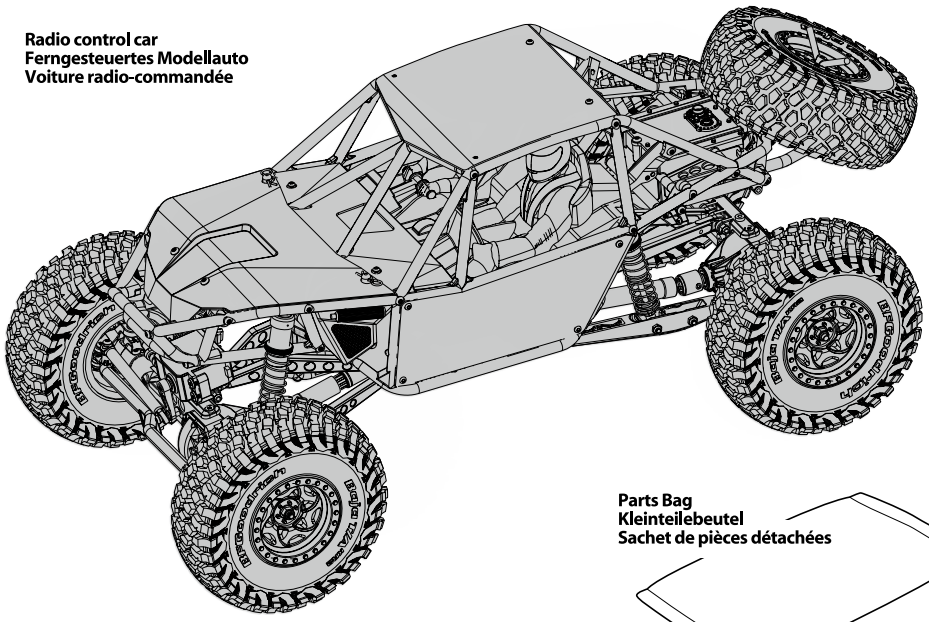


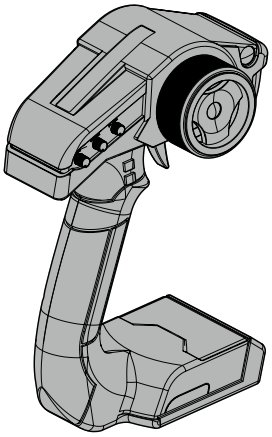


2.4GHz
Transmitter
Sender
Emetteur

Parts Bag
Kleinteilebeutel
Sachet de pièces détachées

Cross wrench
Steckschlüssel
Clé à tube

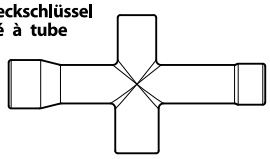


Equipment needed / Benötigtes Zubehör / Equipement nécessaire



x4


4 AA Alkaline Dry Batteries.
4 St. AA Trockenbatterien.
4 piles type R6 pour votre radio commande.

Li-Po or Ni-MH Battery Pack
Akku-Pack
Pack de batterie

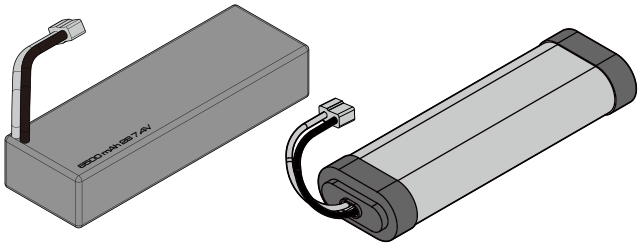


T-Style Battery Connector Required.


Charger
Ladegerät
Chargeur

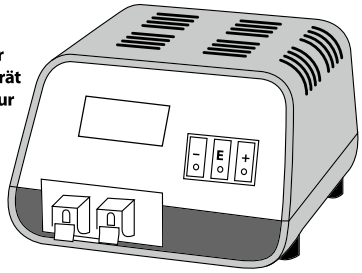



Tools Recommended / Benötigte Werkzeuge / Outillage




Hex wrench
Inbusschlüssel
Clé Allen






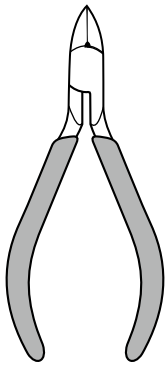

Side cutter
Seitenschneider
Pinces coupantes

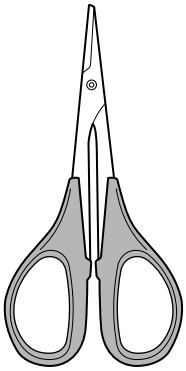


Curved scissors
Schere
Ciseaux

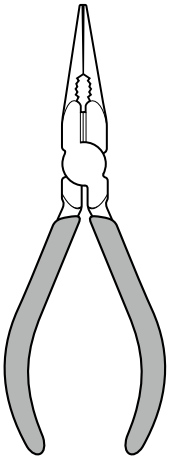


Long nose pliers
Flachzange
Pinces à becs longs

Modeling knife
Modelliermesser
Couteau de modéliste



www.modellmarkt24.ch; www.modellmarkt24.de

Charge your battery / Laden des Fahrakkus / Chargement de la batterie

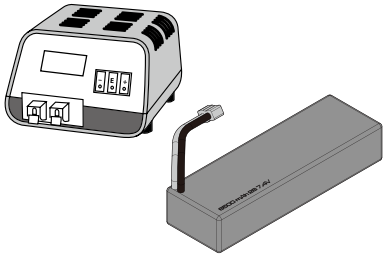

Follow the manufacturer's directions for the charger you purchased to properly charge your batteries.

Folgen Sie den Herstellernrichtungen für den Auflader Ihres gekauft ordentlich, Ihre Batterien zu laden.

Suivre les directions de fabricants pour le chargeur votre a acheté convenablement pour charger vos piles.


Make sure charger is correct for battery type selected for use. Examples: Do NOT charge Lipo batteries with Nickel Metal Hydride charger. Do NOT charge Nickel Cadmium batteries Lipo charger.

Stellen Sie sicher, Ladegerät ist korrekt für Batterietyp zur Verwendung ausgewählt. Beispiele: Laden Sie keine Lipo-Akkus mit Nickel-Metall-Hydrid-Ladegerät. Laden Sie keine Nickel-Cadmium-Akkus Lipo Ladegerät.


Assurez-vous que le chargeur est correcte pour le type de batterie sélectionné à l'emploi. Exemples: Ne pas charger les batteries Lipo avec chargeur hydrure métallique de nickel. Ne chargez pas les batteries au nickel-cadmium Lipo chargeur.

---


1 Turn on the transmitter.

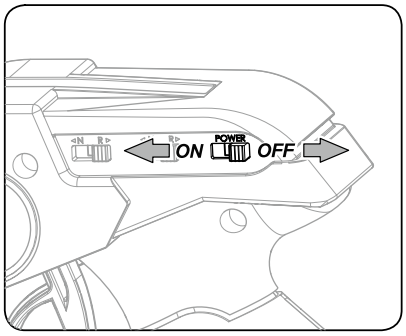


2 Connect the battery.

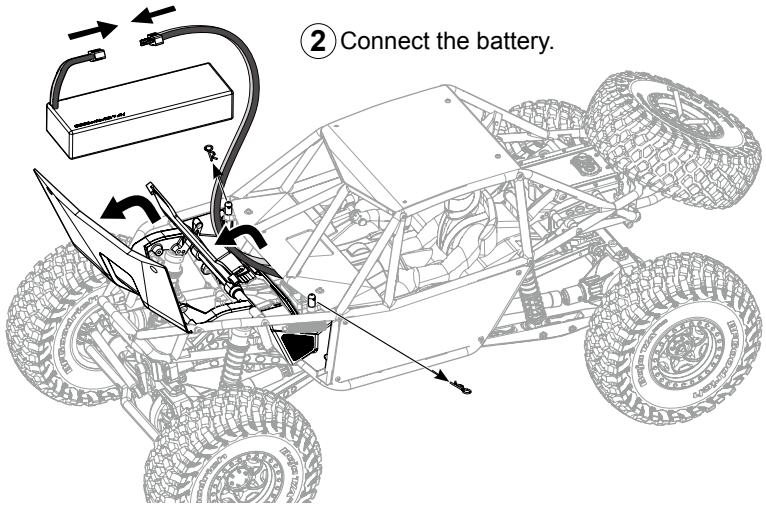

3 Install the battery

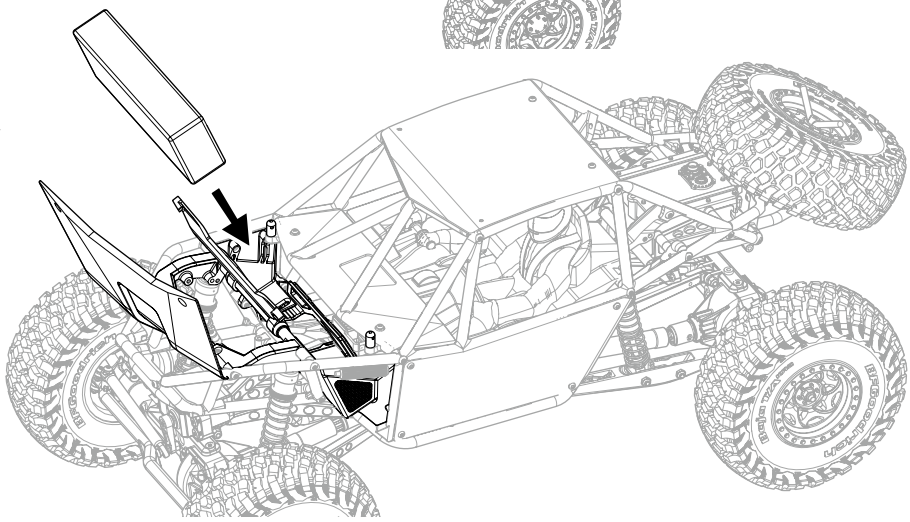


4 Close the battery tray and hood.

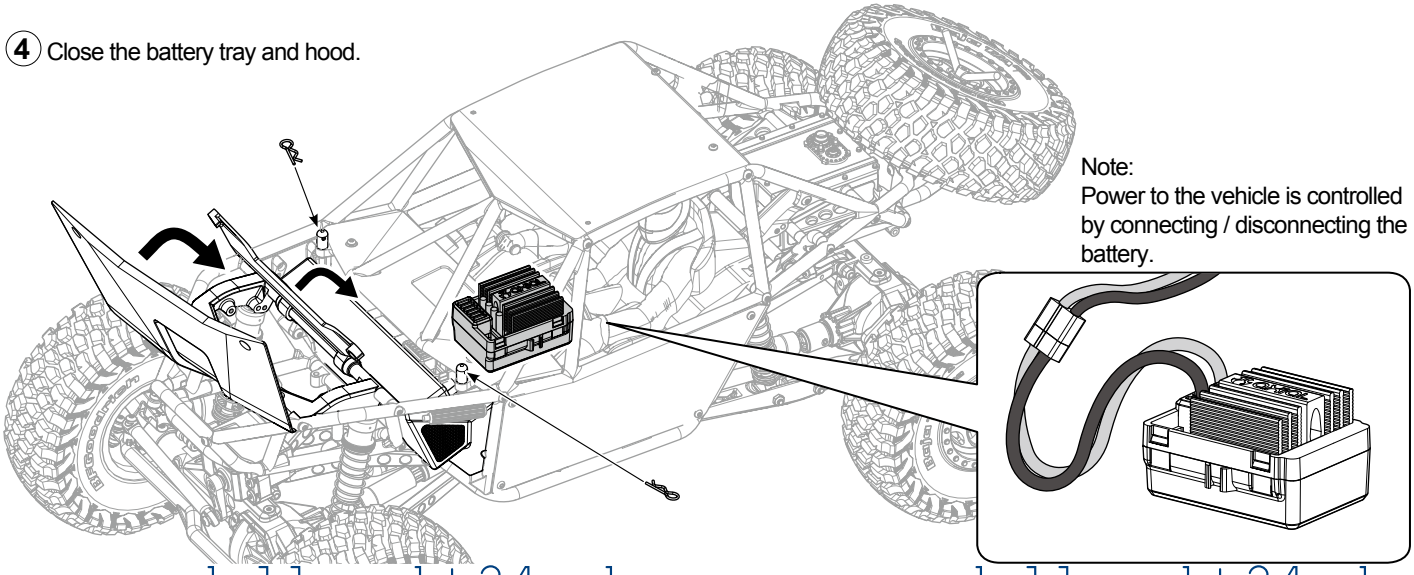

Note:
Power to the vehicle is controlled by connecting / disconnecting the battery.

www.modellmarkt24.ch; www.modellmarkt24.de


Top View Parts

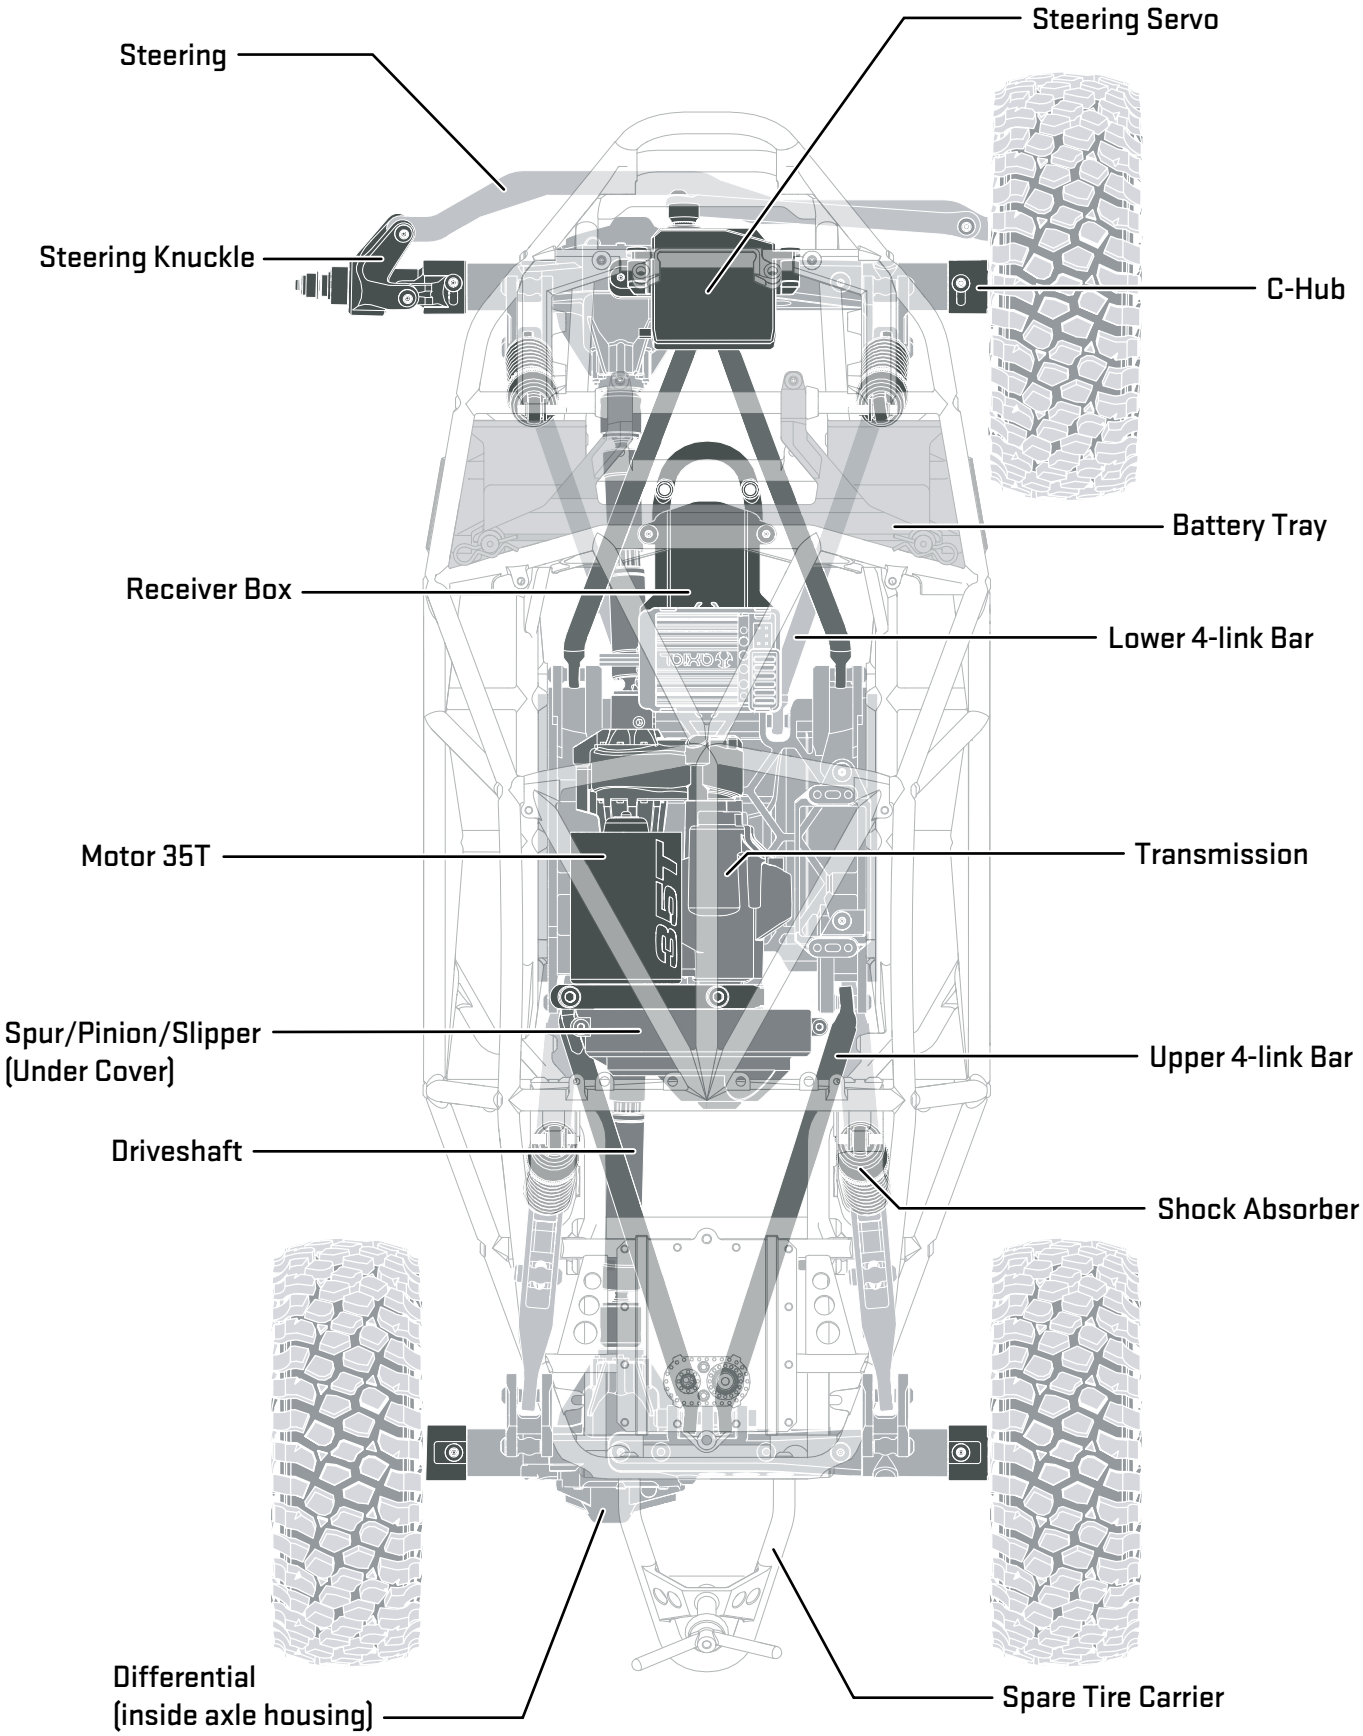


www.modellmarkt24.ch; www.modellmarkt24.de

Getting-Started Checklist


The following checklist is a guide for getting you vehicle running for the first time.

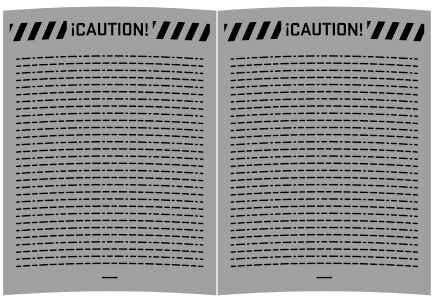


☐ Read 'Cautions' in Manual. (Page 2)

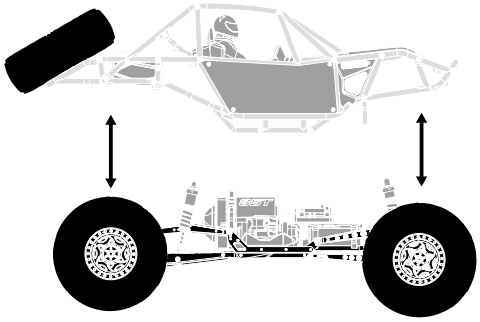


☐ Familiarize yourself with vehicle and its components.

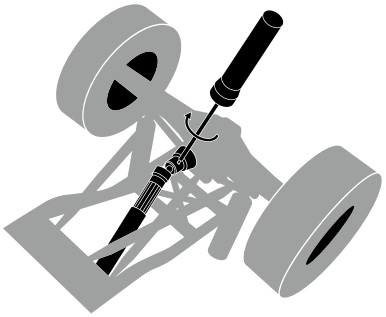


☐ Even though the vehicle is new check driveshaft setscrews and other screws to make sure they are tight from the factory.

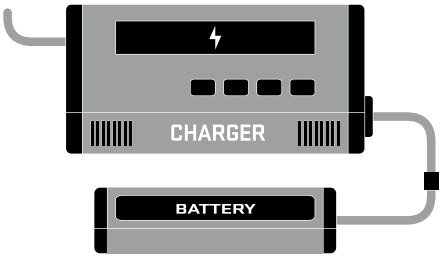


☐ Charge battery pack. (Page 4)

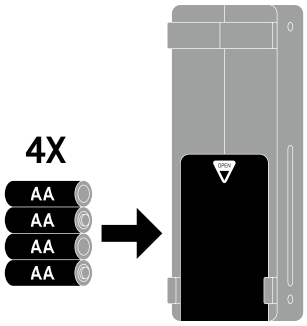


☐ Install 4X AA batteries into Transmitter. (Page 7)

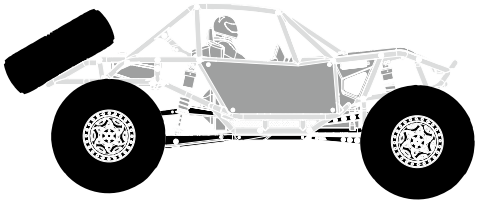

☐ Install battery pack in vehicle. (Page 4)

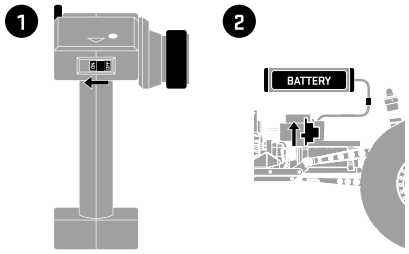


☐ Turn on transmitter first, then plug in battery (power ESC) (Page 4)

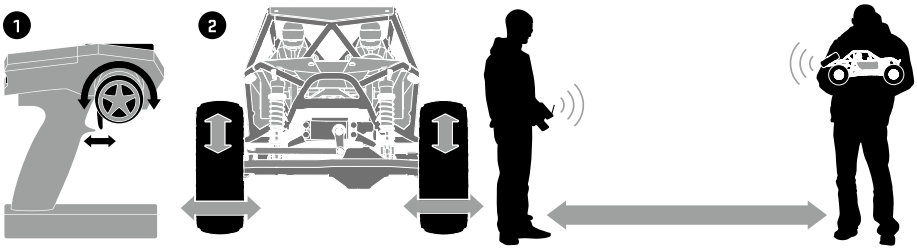


☐ Check to make sure steering and throttle operation work correctly. (Page 7)

☐ Range check radio system. (Next Page)

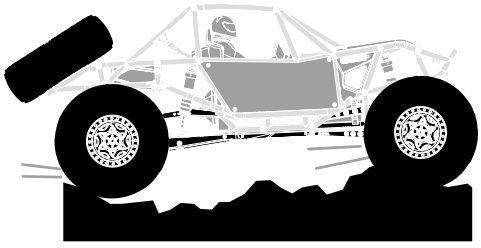

☐ Drive vehicle, challenge yourself and have fun!

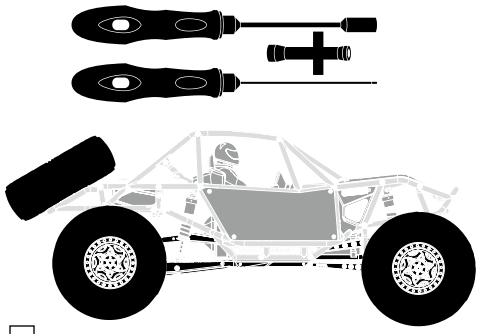

☐ Maintain vehicle. (Next Page)

www.modellmarkt24.ch; www.modellmarkt24.de

Range-Checking Your Radio System

The radio system should be checked before operating the vehicle to ensure it's operating properly and has adequate range.




1. Turn on the transmitter first and then the vehicle.
2. Have a friend hold the vehicle while keeping hands and loose clothing away from moving parts.
3. Walk away until you are at the farthest distance you plan to operate the vehicle.
4. Steer the vehicle back and forth and throttle both forward and reverse making sure there is no erratic behavior.
5. If any erratic behavior is exhibited do not operate the vehicle, call customer service for further assistance.




RANGE-CHECKING FOR DISTANCE

Maintaining Your Vehicle

Just like a full size car or truck your RC vehicle must undergo periodic maintenance in order to ensure peak running performance. Preventative maintenance will also help avoid needless breakages which could result in costly repairs. Below are some suggestions to properly maintain your vehicle.

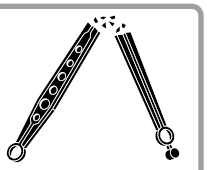


REPLACE ANY NOTICEABLE BENT OR BROKEN PARTS




CHECK FOR WEAR ON THE BALL JOINTS IN THE STEERING AND SUSPENSION LINKS (REPLACE IF NECESSARY)




CHECK DRIVESHAFT SET SCREWS AND RE-THREAD LOCK IF NECESSARY

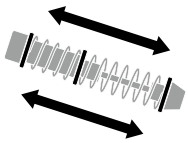


INSPECT SHOCK ABSORBERS FOR SMOOTH DAMPENED OPERATION




CHECK FOR ANY LOOSE CONNECTIONS OR FRAYED WIRING

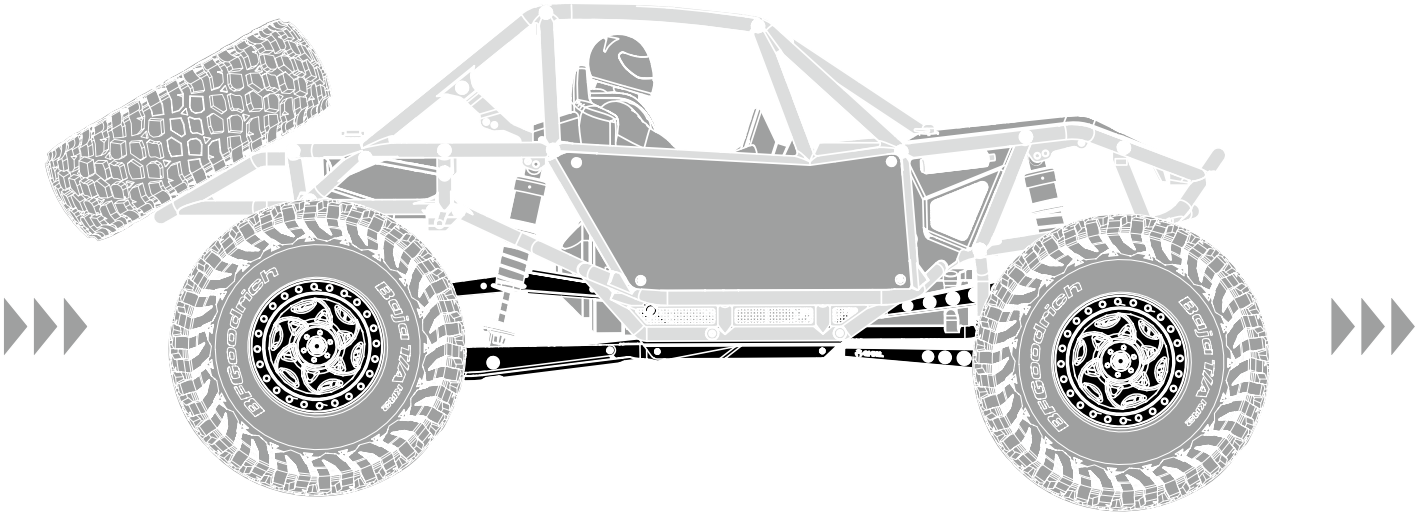


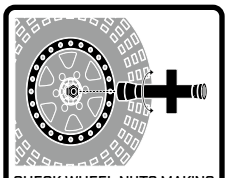


CHECK WHEEL NUTS MAKING SURE THEY'RE SNUG

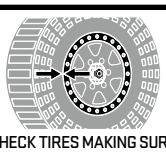


CHECK TIRES MAKING SURE THE BEADS ARE STILL FIRMLY BONDED TO THE ENTIRE CIRCUMFERENCE OF THE RIM

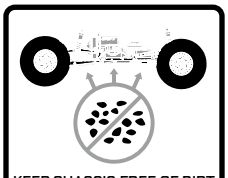

KEEP CHASSIS FREE OF DIRT OR DEBRIS

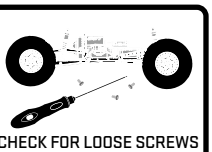


CHECK FOR LOOSE SCREWS ON CHASSIS ESPECIALLY THE KNUCKLE, C-HUB AND AXLE LOCKOUT SCREWS

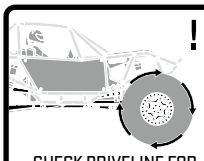


CHECK DRIVELINE FOR SMOOTH BIND-FREE OPERATION




CHECK SLIPPER CLUTCH IF APPLICABLE, FOR PROPER OPERATION (SEE PAGE 25 STEP 23 FOR SETUP INSTRUCTIONS)

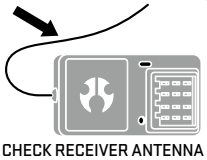


CHECK RECEIVER ANTENNA TO CONFIRM IT'S NOT DAMAGED

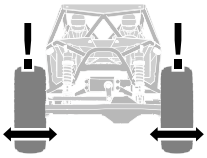

CHECK STEERING OPERATION FOR ANY BINDS

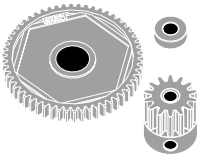


INSPECT THE SPUR AND PINION GEARS FOR DAMAGE

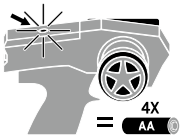

REPLACE TRANSMITTER AA'S IF THE GREEN LIGHT IS BLINKING

www.modellmarkt24.ch; www.modellmarkt24.de

AE-5 Forward/Reverse ESC w/ Drag Brake

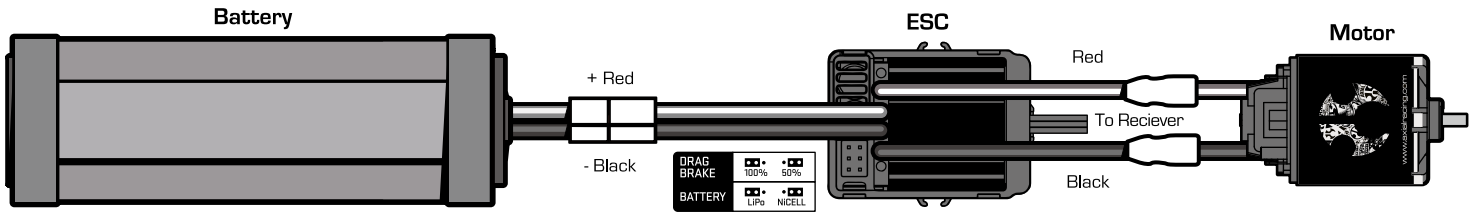

Setup:

Throttle calibration should not be needed out-of-the-box. However in order to make the throttle range of different transmitters, the calibration of the ESC is necessary:

- Mount the ESC in an area that is well ventilated and isolated from vibration and shock.
- Connect the ESC motor wires to the motor red-red & black-black.
- Plug the receiver with into the throttle channel on the receiver. The black negative wire should be towards the outside of the receiver.
- Before plugging the battery into the ESC, make sure your transmitter is on and the throttle trim is set at zero.
- Connect the battery to the ESC, this will turn on the ESC.
- Test forward and reverse control using the transmitter.
- To calibrate the ESC, make sure the transmitter is on and the throttle control is at neutral.
- Connect the battery to the ESC and wait 3 seconds to let the ESC initiate a self-test and automatic throttle calibration.
  When the ESC is ready to run a long beep sound will be emitted from the motor.
  Always disconnect the battery when the vehicle is not in use.

Notes:

- Drag Brake set to 100% from the factory.
- LiPo Cut-Off is set to "ON" from the factory.

Specifications:

Input Voltage:	2-3S LiPo, 5-9 Cells NiMH/NiCd
Size:	46.5mm x 34mm x 28.5mm
Weight:	70g
Motor Limit:	12T 2S / 18T 3S
On-Resistance FET:	.002
Rated/Peak Current:	180A
Braking Current:	90A
BEC Voltage/A:	5.0V 2/0A Peak
PWM Frequency:	1KHz


Beep Sound and LED Status:

1 Short Beep:	Battery is NiMH/NiCd
2 Short Beeps:	Battery is 2S Lipo
3 Short Beeps:	Battery is 3S Lipo
1 Long Beep:	Self-test and throttle calibration is OK and ESC is ready to run

CAUTION

CONNECT THE BATTERY PACK JUST BEFORE DRIVING AND DISCONNECT IT IMMEDIATELY AFTER.
ALWAYS MAKE SURE YOU ARE CONNECTING THE ESC TO A PROPER POWER SOURCE THAT HAS THE CORRECT VOLTAGE & POLARITY. INCORRECT VOLTAGES OR REVERSED POLARITY WILL DAMAGE THE ESC.
ONCE THE BATTERY PACK IS CONNECTED, HANDLE THE MODEL WITH EXTREME CARE, MAKE SURE YOU ARE CLEAR OF ALL ROTATING PARTS.

Roll Cage Removal

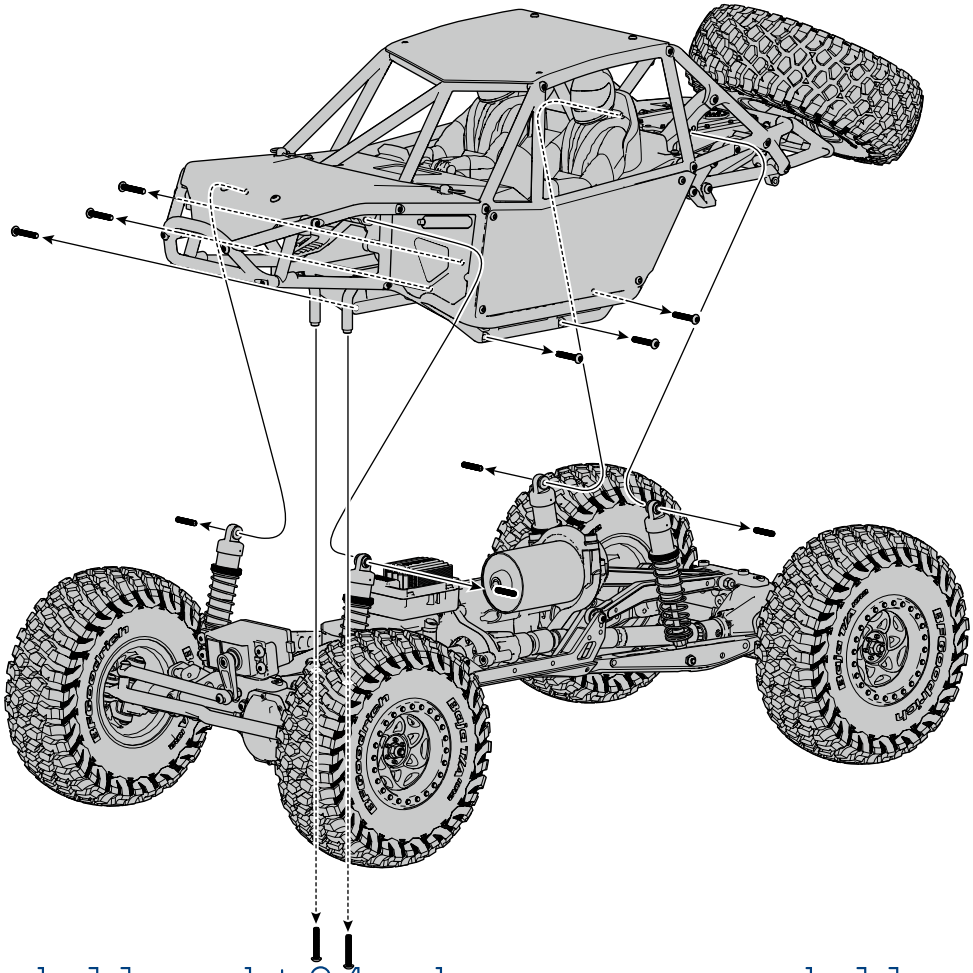


www.modellmarkt24.ch; www.modellmarkt24.de

Gear Ratio / Getriebeübersetzung

Use this equation to calculate the final drive ratio.
Final Drive Gear Ratio = (Spur/Pinion)x5.67

Mit dieser Gleichung können Sie die Gesamtübersetzung berechnen.
Gesamtubersetzung = (Spur/Pinion)x5.67

Slower - More Torque
Langsamer - Mehr Kraft

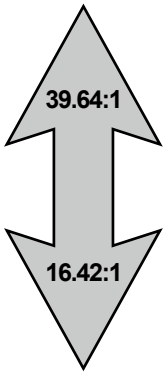

Faster - Less Torque
Schneller - Weniger Kraft

32 Pitch 38T/13T (Stock Gearing AX30392 or HD AX30395)				
	Spur Gear			
Pinion	56	60	64	68
11	28.85	30.91	32.97	35.03
12	26.44	28.33	30.22	32.11
13	24.41	26.15	27.90	29.64
14	22.67	24.88	25.90	27.52
15	21.15	22.67	24.18	25.69
16	19.83	21.25	22.67	24.08
17	18.67	20.00	21.33	22.67

32 Pitch 36T/14T (Overdrive HD Gearing AX30401)				
	Spur Gear			
Pinion	56	60	64	68
11	25.38	27.19	29.00	30.81
12	23.26	24.92	26.58	28.25
13	21.47	23.01	24.54	26.07
14	19.94	21.36	21.94	22.60
15	19.61	19.94	21.27	22.60
16	17.45	18.69	19.94	21.18
17	16.42	17.59	18.77	19.94

32 Pitch 43T/13T (Underdrive HD Gearing AX30402)				
	Spur Gear			
Pinion	56	60	64	68
11	32.64	34.97	37.31	39.64
12	29.92	32.06	34.20	36.33
13	27.62	29.59	31.57	33.54
14	25.65	27.48	29.31	31.14
15	23.94	25.65	27.36	29.07
16	22.44	24.04	25.65	27.25
17	21.12	22.63	24.14	25.65

NOTES


www.modellmarkt24.ch; www.modellmarkt24.de


Suspension Tuning - Upper Link Adjustments

•Moving the upper links at the chassis will change the anti-squat characteristics of the vehicle under power.

•RTR Stock: Front upper hole, rear middle hole.

•Optional holes, will create more or less Anti-Squat for the rear traction under power.

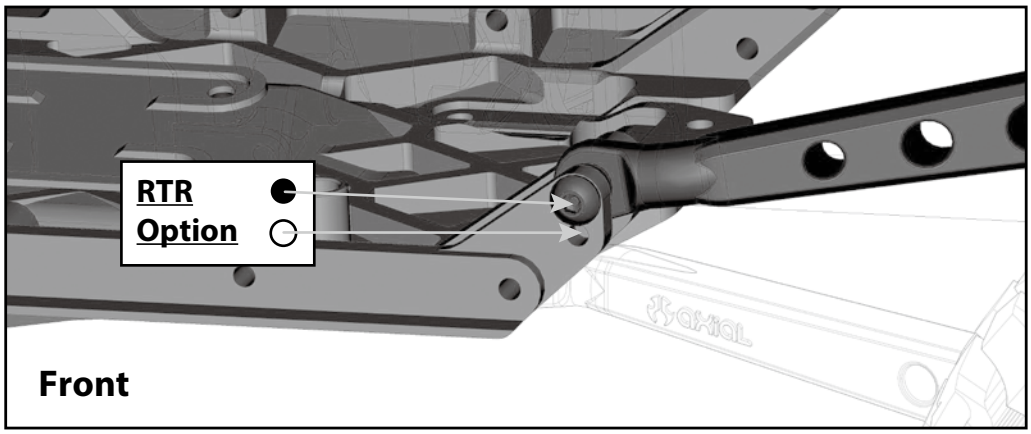

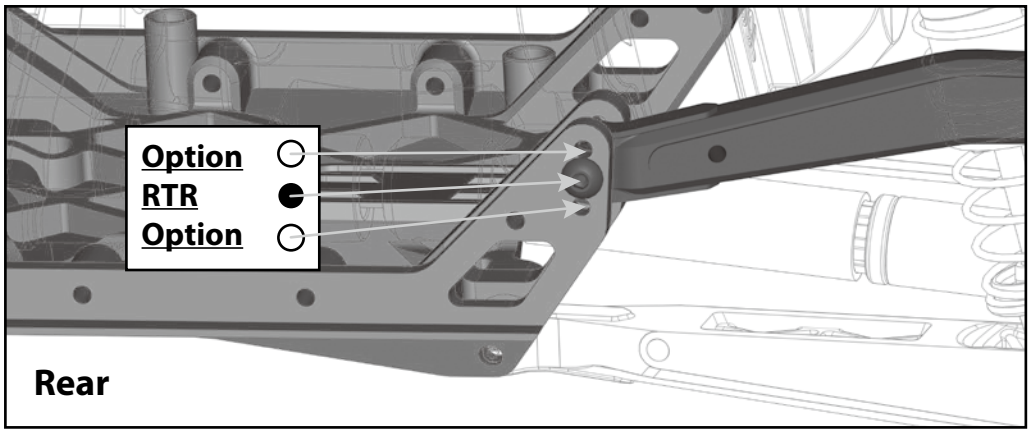


Gear Mesh Adjustment

•Remove X2 M2.6x8mm AXA0413 Flatheads from AX31107 Spur Cover to gain access to spur and pinion

•Loosen X2 M4x12mm AX31121 Capheads from AX31106 Motor Mount Clamp

•Rotate the motor and motor mount assembly to fine tune gear mesh

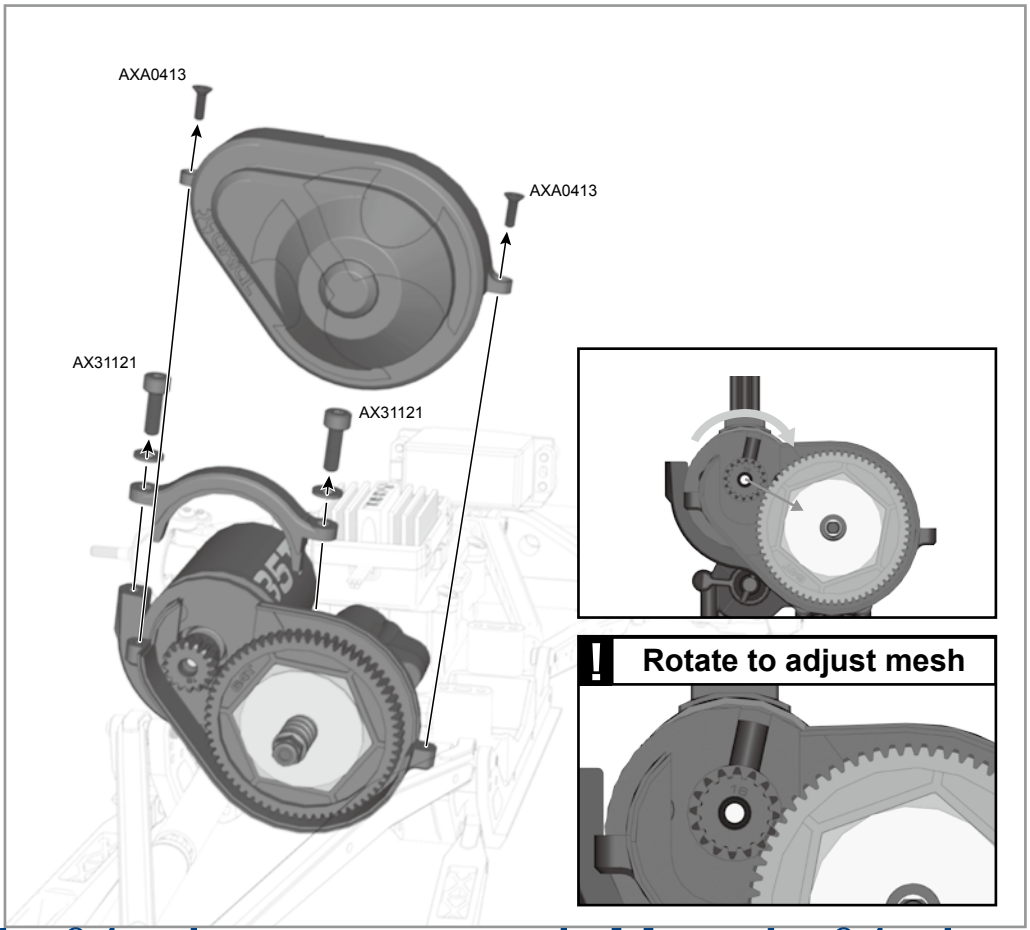

www.modellmarkt24.ch; www.modellmarkt24.de

Warranty Info

AXIAL LIMITED WARRANTY

Your Axial product is warranted to be free of defects in materials and workmanship when new in the factory sealed box. This warranty does not cover damages due to normal wear and tear, users' failure to perform routine maintenance, error of assembly or installation, modifications or addition of aftermarket parts or option parts. This warranty lasts as long as the original purchaser owns the product and is not transferable (verified by dated itemized sales receipt accompanied with product). In the event of a defect under this warranty, Axial will, at our discretion, repair or replace the product, provided our inspection indicates that an original defect exists. Axial provides a 10-day warranty from the date of purchase on electronics (i.e. servo, esc, radio). Axial reserves the right to replace any product which is no longer available with a product of comparable value and function. If Axial determines the repair is not covered under warranty guidelines, there could be a charge applied for the repair and return shipping charges. Note: Purchasing products from unauthorized distributors may void warranty and prevent support and service.

INTERNATIONAL CUSTOMER WARRANTY

Please return product to the dealer where the purchase was made. If your Axial product purchase was made through an on-line retailer, any warranty issues must be taken care of by that retailer. Axial assumes no responsibility for Axial products sold internationally by on-line retailers.

REPAIR

For warranty repair, please contact Axial Customer Service at (877) 64-AXIAL (877-642-9425).

HOURS AVAILABLE:


8:00 am - 5:00 pm Monday through Friday, Central Time.

Trouble Shooting / Fehlerbehebung / Dépannage


Problem *Problem* *Problème*	*Cause* *Grund* *Cause*	*Remedy* *Lösung* *Remède*
Does not move *Das Auto fährt nicht* *Le véhicule ne boughe pas*	*Batteries are not installed properly in the transmitter.* *Die Batterien sitzen nicht korrekt im Sender.* *Les piles ne sont pas placées correctement dans l'émetteur.* *Weak or no battery in model.* *Leerer oder kein Akku im Auto.* *Batterie faible ou non installée* *Damaged motor.* *Kaputter Motor.* *Moteur endommagé* *Frayed or broken wiring.* *Beschädigte Verkabelung.* *Câble dénudé ou coupe* *ESC is shut down by heat protection circuit.* *Notabschaltung des Reglers wegen Überhitzung.* *Le système ESC est fermé par le circuit de protection thermique.*	*Make sure batteries are properly installed.* *Legen Sie die Batterien korrekt ein.* *Positionnez correctement les piles dans l'émetteur.* *Install charged battery.* *Einbauen eines geladenen Akkus.* *Mettez en place une batterie chargée* *Replace with new motor.* *Austausch durch einen neuen Motor.* *Remplacez par un nouveau moteur* *Splice and insulate wiring completely.* *Erneuern und isolieren Sie die kaputte Stelle.* *Faites une épissure et isolez complètement le câble.* *Stop driving immediately, do not drive the car until the Speed Controller cools down.* *Fahren Sie nicht weiter. Warten Sie bis der Fahrten regler abgekühlt ist.* *Arrêtez immédiatement de conduire, ne pilotez pas la voiture tant que le contrôleur de vitesse n'a pas refroidi.*
No Control. *Keine Kontrolle über das Auto Pas de contrôle*	*Improper antenna on transmitter or model.* *Zu kurze Antenne am Sender oder Auto.* *Antenne inadéquate sur l'émetteur ou le véhicule* *Weak or no batteries in transmitter or model.* *Leere oder keine Batterien im Sender oder Auto.* *Batterie faible ou absente dans l'émetteur ou le véhicule.* *Neutral position or trim is incorrect.* *Neutralposistion oder Trimmung sind verstellt.* *La position neutre est incorrecte ou le trim n'est pas réglé.* *Are the receiver and battery connections properly connected?* *Sind der Empfänger und die Batterieverbindungen ordentlich verbunden?* *Son conectadas apropiadamente las conexiones del receptor y la batería?*	*Install charged or fresh batteries.* *Einbauen voller Batterien.* *Mettez des batteries rechargées ou neuves.* *Fully extend antenna.* *Ziehen Sie die Antenne vollständig aus.* *Dépliez complètement l'antenne.* *Adjust the steering trim.* *Stellen Sie die Lenkungstrimmung neu ein.* *Réglez le trim de direction.* *Check receiver and battery connections.* *Prüfen Sie Empfänger und Batterieverbindungen.* *Compruebe conexiones de bateria y receptor.*
Steering and Throttle Function Reversed. *Lenkung und Gas funktionieren genau verkehrt herum.* *Direction et accélération inverses.*	*Servo reverse switch is in wrong position.* *Servorichtungs-Schalter ist in der falschen Position.* *L'interrupteur de marche arrière du servo est dans la mauvaise position* *Please check that the wires from ESC to motor are connected properly.* *Bitte überprüfen Sie, ob die Kabel vom Regler zum Motor richtig sitzen.* *Veuillez vérifier que les fils allant de l'ESC au moteur sont correctement raccordés.*	*Set to correct position.* *Satz, Position zu korrigieren* *Vérifiez la position correcte* *Check to make sure motor and ESC are properly connected.* *Kontrolle sich zu vergewissern, dass Motor und ESC ordentlich verbunden sind.* *Le contrôle pour assurer que le moteur et ESC est convenablement connecté.*

www.modellmarkt24.ch; www.modellmarkt24.de


Parts Reference / Übersicht aller Teile / Référence des pièces

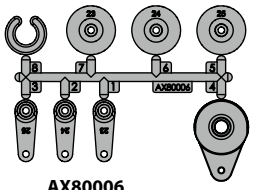


AX80006 x1
Servo Set

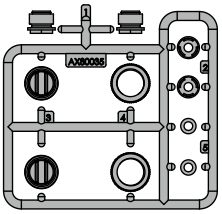


AX31301 x2
10mm Shock Caps Parts Tree (Blue)

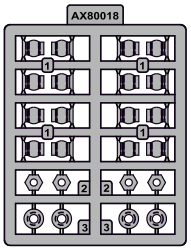


AX80018 x3
Hardware Parts Tree



AX80071 x1
Straight Axle Adapter Rear

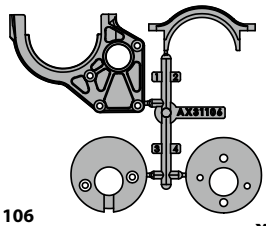



AX31106 x1
2-Speed Hi/Lo Transmission Motor Mount

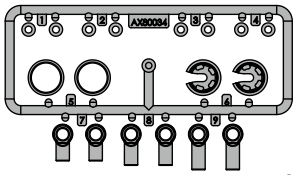


AX31300 x2
10mm Shock Parts Tree 2 (Blue)


AX80073 x1
Offset Axle Steering Link

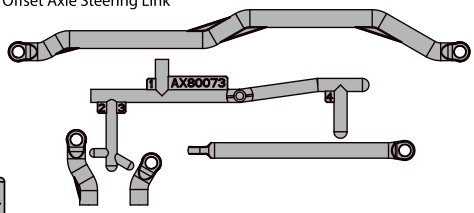

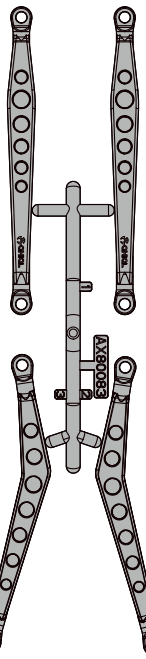


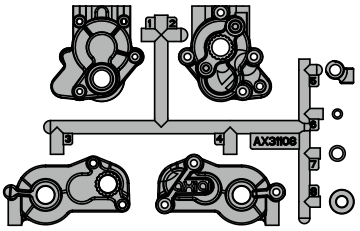

AX31108 x1
2-Speed Hi/Lo Transmission Case

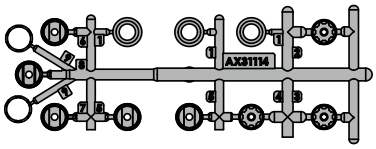


AX31114 x2
WB8 Driveshaft

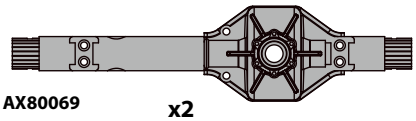


AX80069 x2
Offset Axle Housing


AX80083 x1
Rock Buggy Links Set

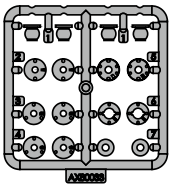

AX80033 x2
10mm Shock Set 1

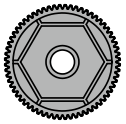

AX31065 x1
Spur Gear 32P 64T




AX80072 x1
Offset Axle 4 link mount




AX80062 x1
XR10 C Hub Carrier Set



AX80002 x 2
Diff Case -Small

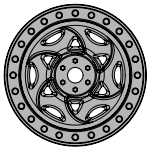


AX31326 x5
22.2 Walker Evans Wheels

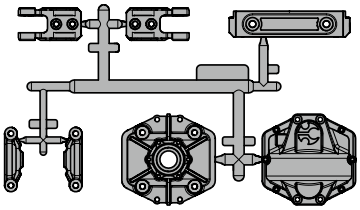

AX31317 x1
AR60 Differentail Cover and PTO


AX31318 x1
RR10 Battery Tray Chassis Components

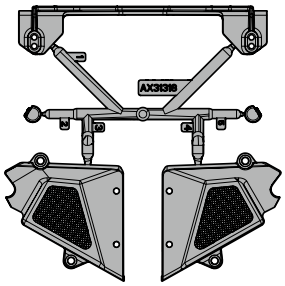





AX31316 x1
AR60 Dual Shear Steering Knuckle Set

AX31333 x1
RR10 Skid Plate

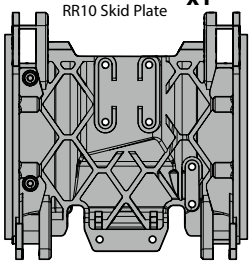


AX31332 x1
RR10 Battery Tray Chassis Components 2

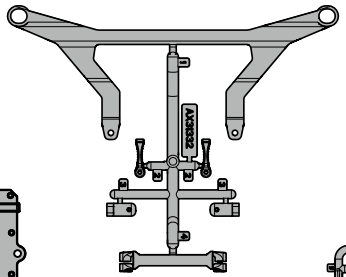


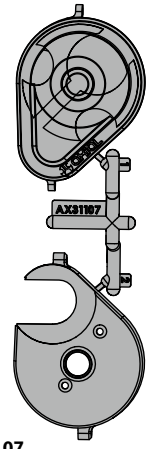


AX31107 x1
Shifter Spur Cover

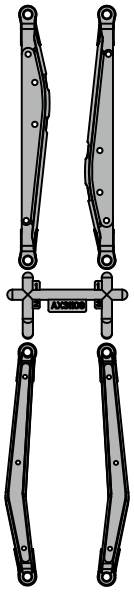


AX31109 x1
Yeti™ Rear 4 Link Set

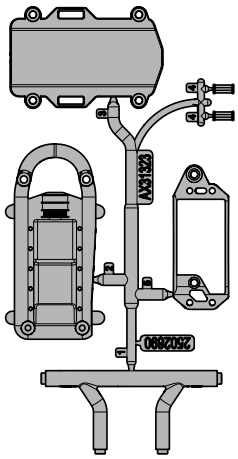


AX31323 x1
RR10 Electronics Box Mold

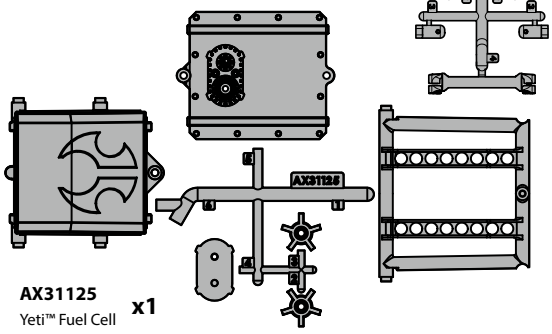

AX31125 x1
Yeti™ Fuel Cell

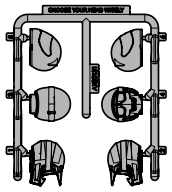


AX31049 x2
Helmet Mold (Black)

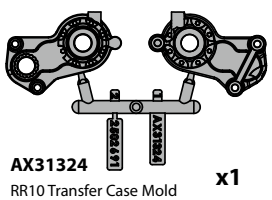


AX31324 x1
RR10 Transfer Case Mold


www.modellmarkt24.ch; www.modellmarkt24.de

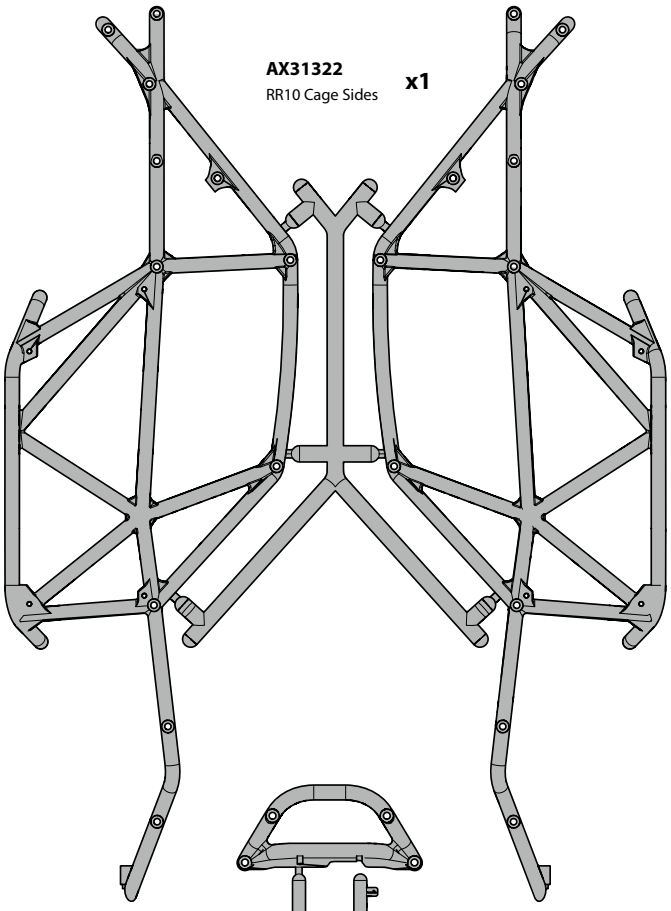


AX31322 x1
RR10 Cage Sides

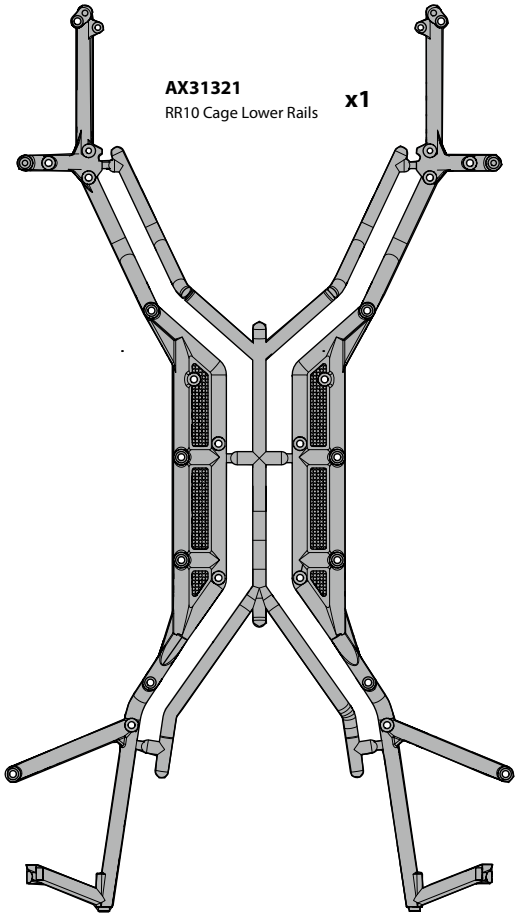

AX31321 x1
RR10 Cage Lower Rails

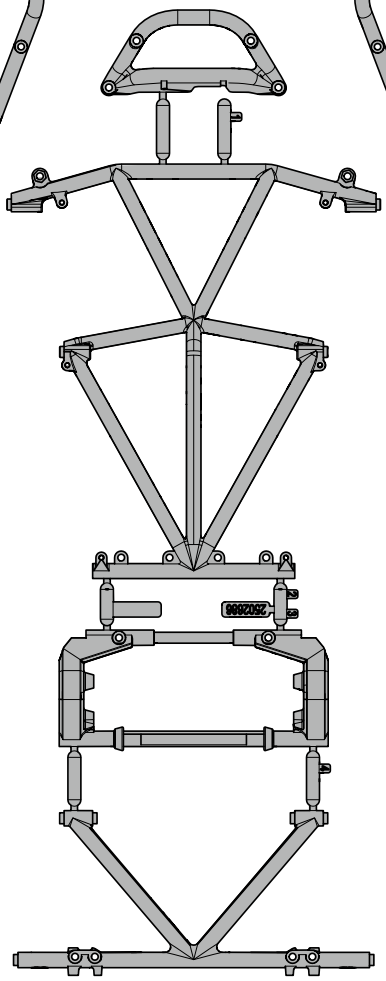


AX31319 x1
RR10 Center Cage Mold

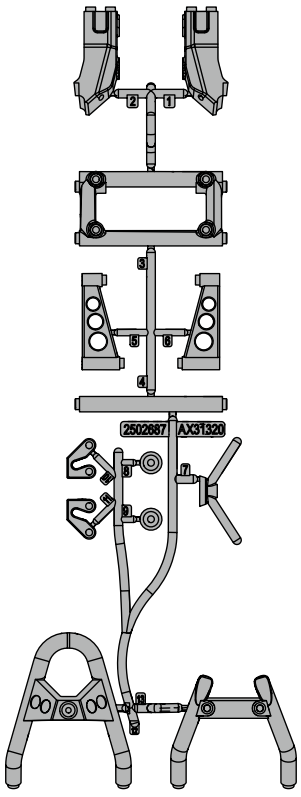

AX31320 x1
RR10 Rear Cage Components Mold

www.modellmarkt24.ch; www.modellmarkt24.de



AX31131 x1
T-Case Gear Set




AX30408 x2
Input Shaft 5x29mm




AX30113
Rubber Bump Stop 3.6x7x4 x4




AX30413
Slipper spring x1




AX30112 x4
Shock Diaphragm 13x4.5mm




AX30429 x1
12mm Aluminum Hub




AX30392 x2
13T Bevel Gear




AX30723 x1
Pinion 32DP 12T

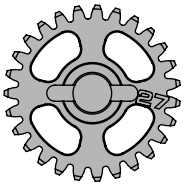

AX31131 x1
T-Case Gear Set

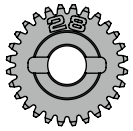

X31130 x1
High Speed Transmission Hear Set
G

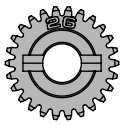


AX31130 x1
High Speed Transmission Gear Set




AX31131 x1
T-Case Gear Set



AX31131 x1
T-Case Gear Set



AX31148 x4
WB8-HD Joint Male Universal




AX31148 x4
WB8-HD Joint 10X15mm




AX30463 x4
4.5x6.5mm Join Pin




AXA0286 x1
M4x12mm

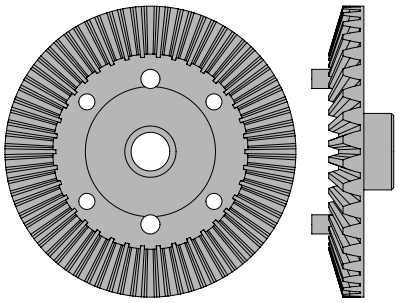


AX30392 x2
38T Bevel Gear

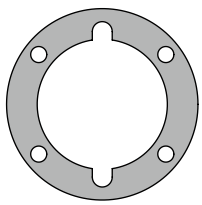

AX30385 x2
Diff Gasket 16x25x0.5mm

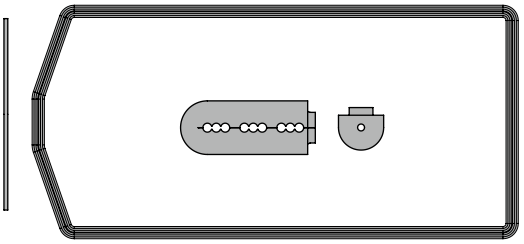


AX31083 x1
Radio Box Seals

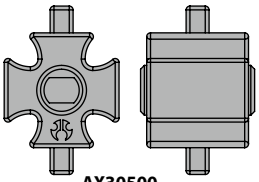


AX30500 x2
Heavy Duty Locker




AX31314 x4
Aluminum Shock Body 12x47.5mm

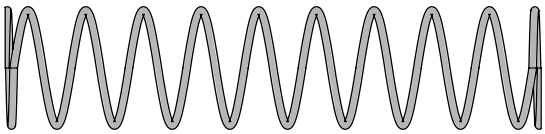


AX31315 x2
Spring 14x70mm 1.43 lbs/in - Purple (2pcs) (Blue Springs)

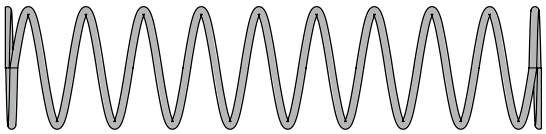


AX31336 x2
Spring 14x70mm 3.27 lbs/in - Yellow (2pcs) (Blue Springs)

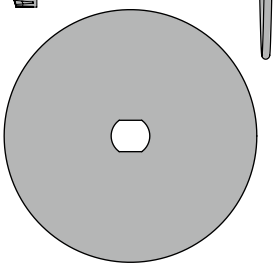

AX31059 x2
Slipper Plate



AX30368 x2
Axle 6x39mm

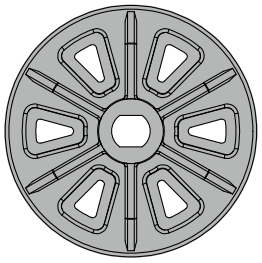


AX31067 x1
Slipper Plate



AX31313 x1
Transfer Case Output Shaft 5x68mm




AX30155 x4
Shock Shaft 3x59.5



AX31129 x1
2-Speed Hi/Lo Transmission Bottom Shaft 5x75mm



AX31127 x1
2-Speed Hi/Lo Transmission Top Shaft 5x91mm

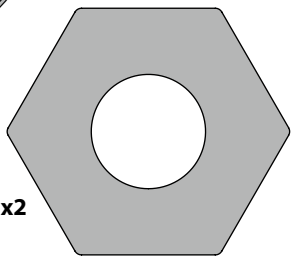

AX31068 x2
Slipper Pad



AX30419 x1
Solid Axle Dogbone 7x69mm



AX30419 x1
Solid Axle Dogbone 7x125mm



AX30776 x1
Straight Axle Shaft 6x104.2mm

AX30776 x1
Straight Axle Shaft 6x160.2mm



www.modellmarkt24.ch; www.modellmarkt24.de



AX31028 x8
PIN 2.0 x11




AX30163 x5
Pin 2x10mm




AXA1391 x2
E4 e-clip



AXA1393 x2
E2.5 e-clip



AX31250 x4
M4 Serrated Nylon Locking Nut (Black)



AXA1045 x1
M4 Nylon Lock Nut



AXA1041 x4
M2.5 Nylon Lock Nut



AXA1052 x13
M3 Thin Nylon Locking Hex Nut



AXA1053 x4
M3 Nylon Locking Hex Nut




AXA1069 x8
Washer 2.7x6.7x0.5 mm



AXA1070 x1
Washer 3x6x0.5 mm




AXA1071 x2
Washer 4x8x0.5mm




AXA1184 x4
O-Ring 7.5x1.5mm



AXA1202 x8
O-Ring 3.5x2mm



AXA1221 x21
Bearing 5x11x4mm

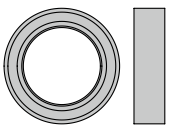

AXA1230 x6
Bearing 10x15x4mm



AXA180 x12
M3x3mm




AXA291 x1
M4x4mm



AXA186 x8
Set Screw M3x16mm



AXA0187 x4
Set Screw M3x20mm




AXA1059 x2
6mm Body Clip



AX30450 x4
Flange Pipe 3x4.5x5.5



AXA0109 x4
M3x10mm
Oversize Flat Hex Socket



AXA31121 x2
M4x12mm Cap Head



AXA015 x16
M2x10mm



AXA0023 x4
M2.6X8mm



AXA087 x8
M3x16mm



AXA091 x2
M3x30mm



AXA0113 x9
M3x6mm



AXA114 x6
M3x8mm



AXA115 x14
M3x10mm



AXA116 x12
M3x12mm



AXA117 x19
M3x15mm



AXA118 x46
M3x18mm



AXA144 x10
M3x8mm



AXA31185 x2
M3x10mm



AXA146 x17
M3x12mm



AXA0147 x1
M3x16mm



AXA148 x8
M3x18mm



AXA150 x3
M3x25mm

AXA119 x1
M3x20mm

AXA121 x4
M3x30mm

AXA413 x2
M2.6x8mm


AXA0422 x16
M2.6x6mm


AXA436 x1
M3x12mm

AXA0439 x1
M3x20mm


AXA441 x4
M3x30mm

www.modellmarkt24.ch; www.modellmarkt24.de

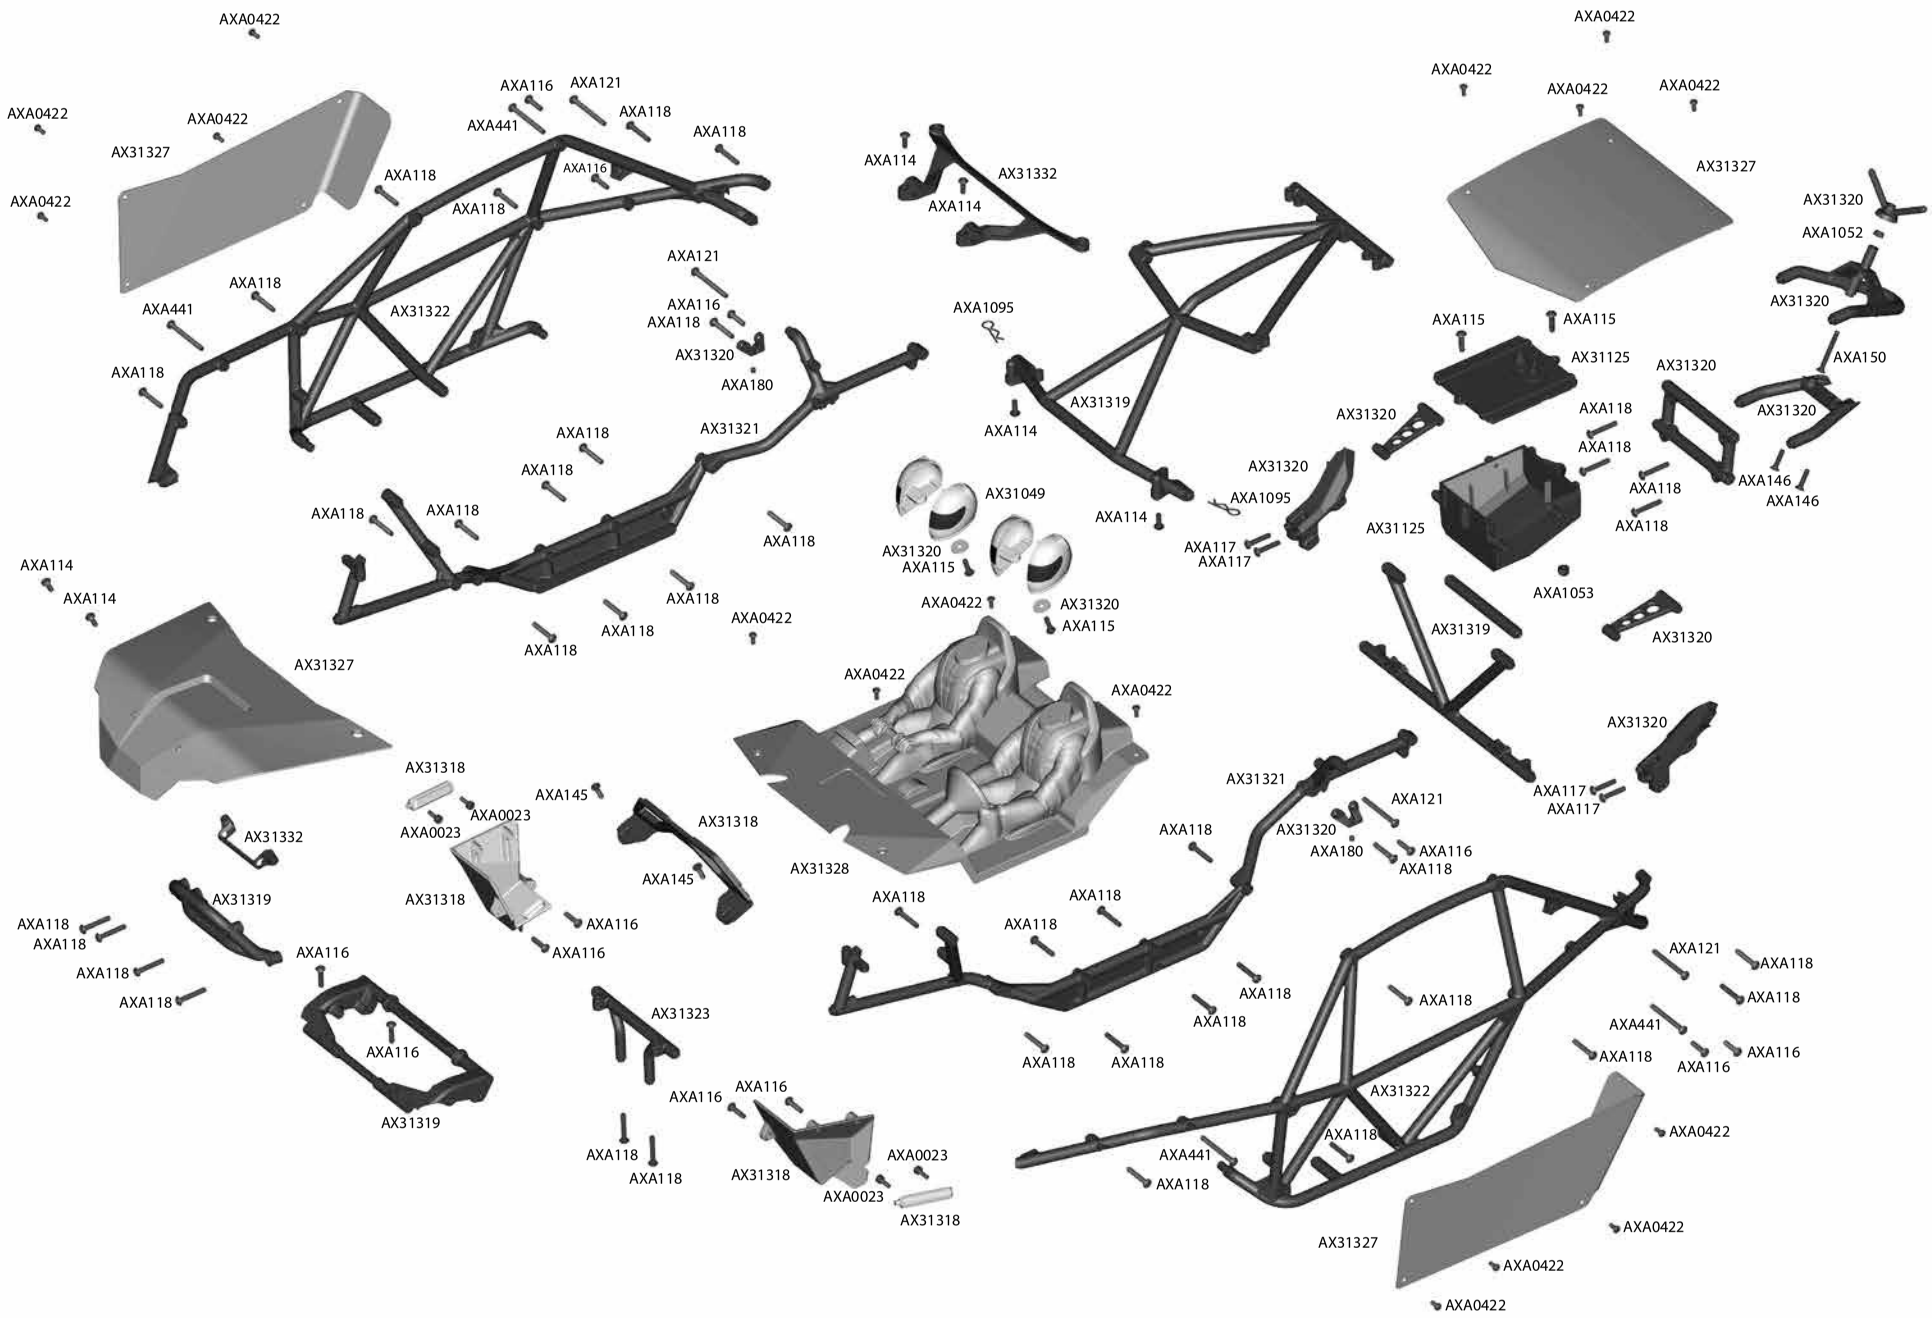

AXA0422
AXA0422
AXA0422

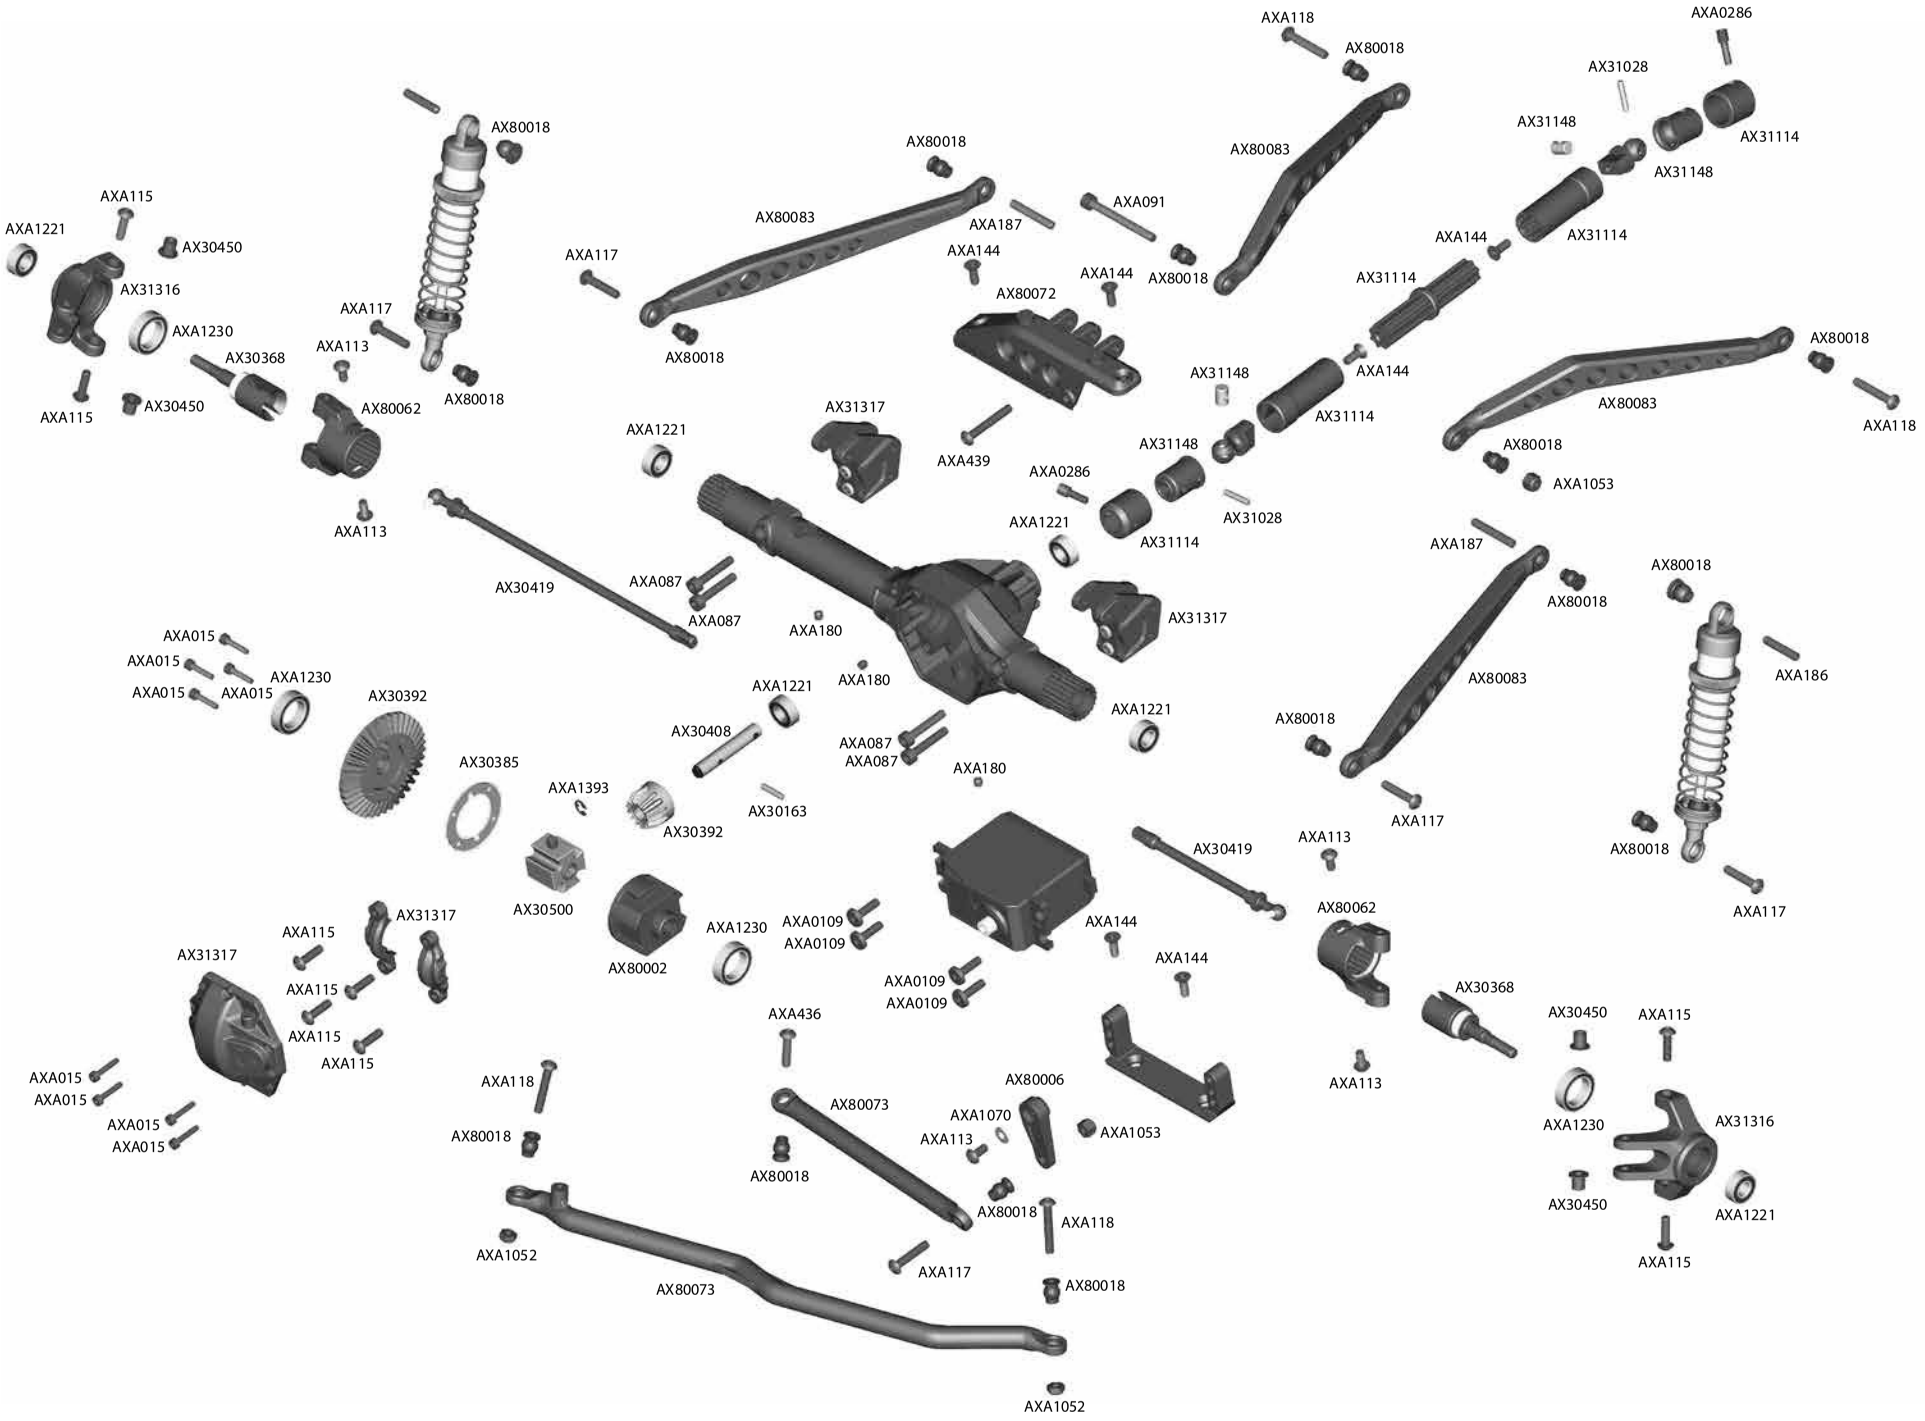


www.modellmarkt24.ch
17
www.modellmarkt24.de

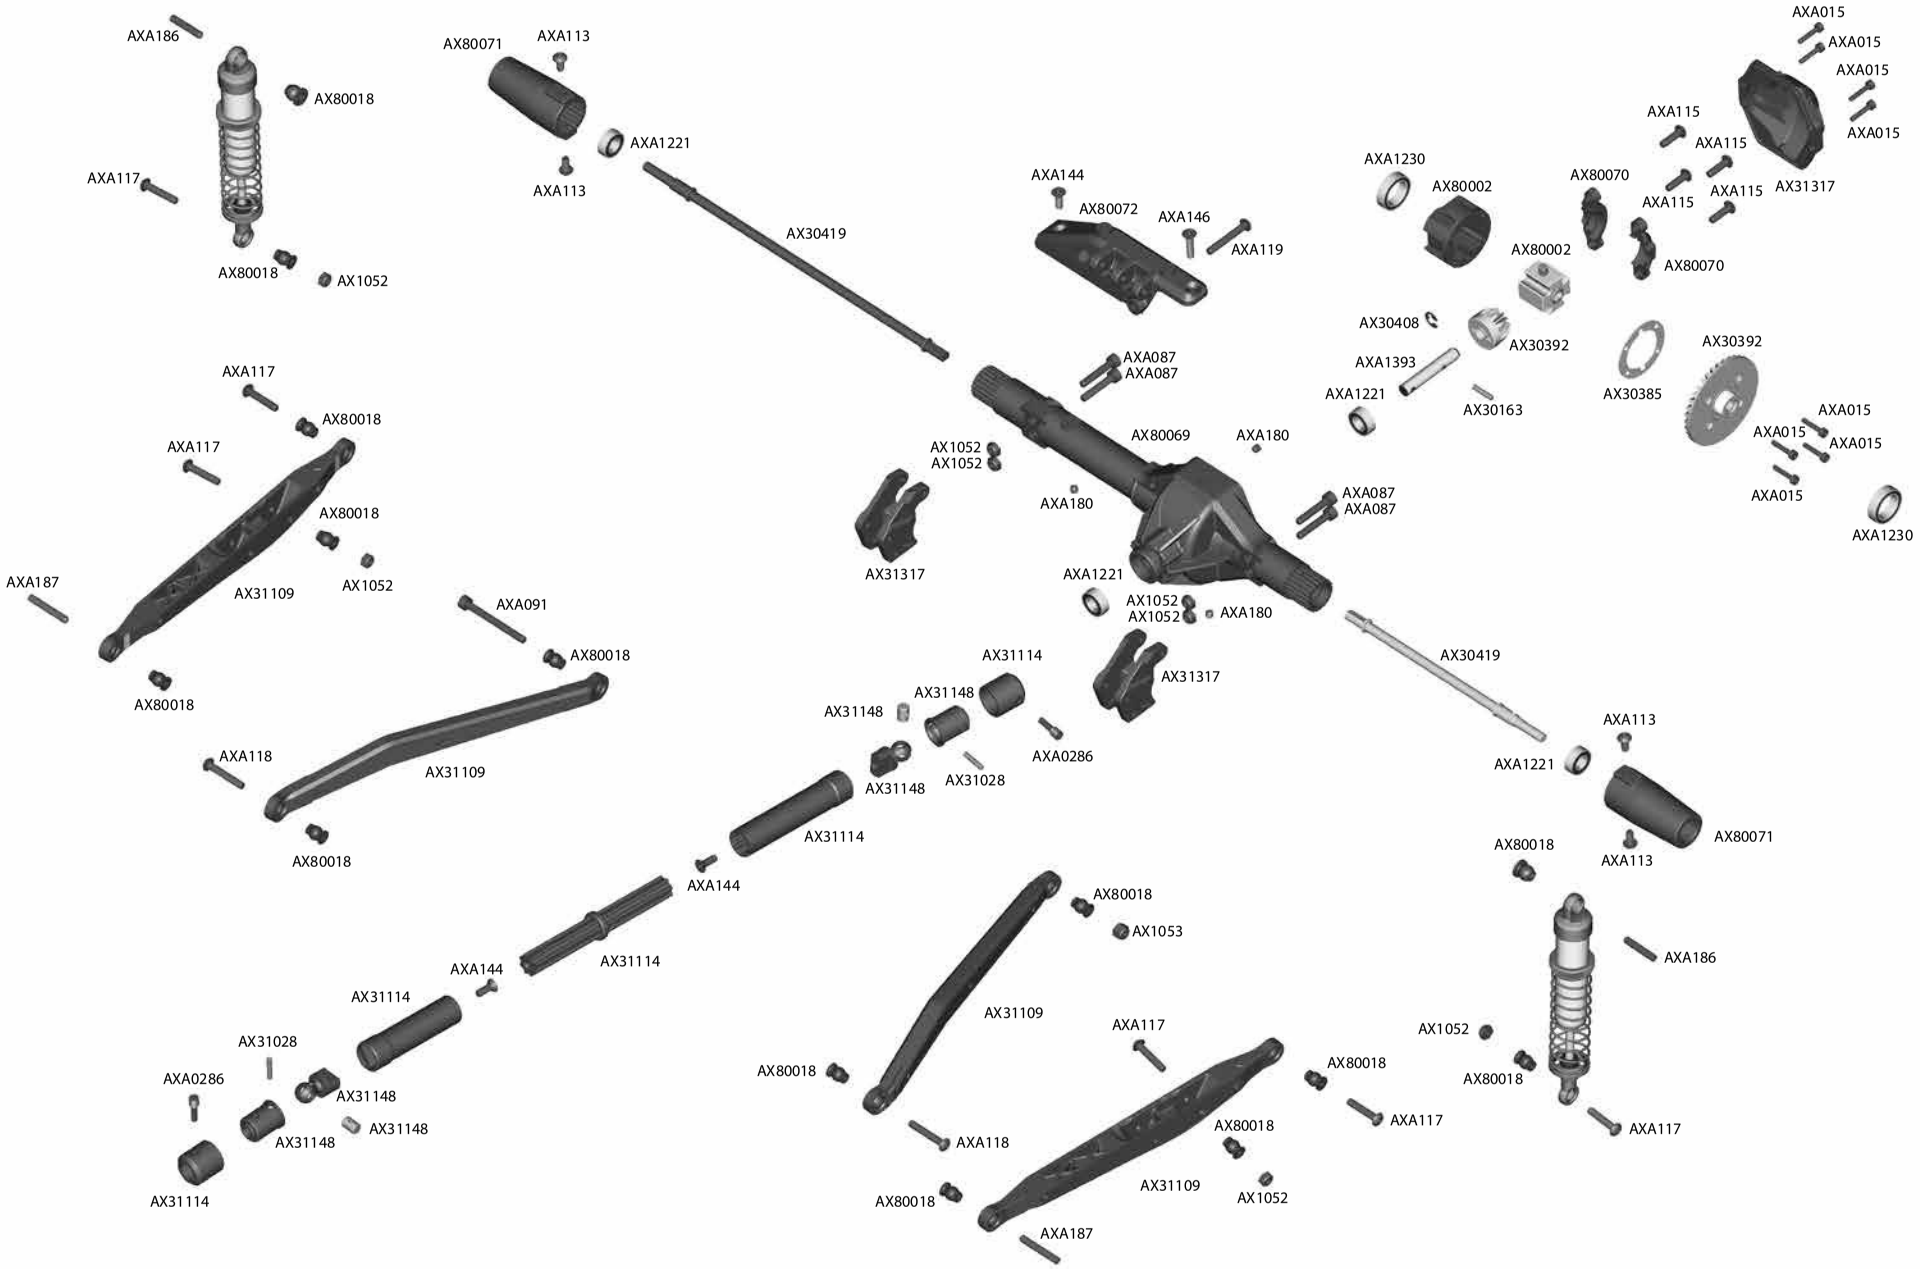

www.modellmarkt24.ch
www.modellmarkt24.de

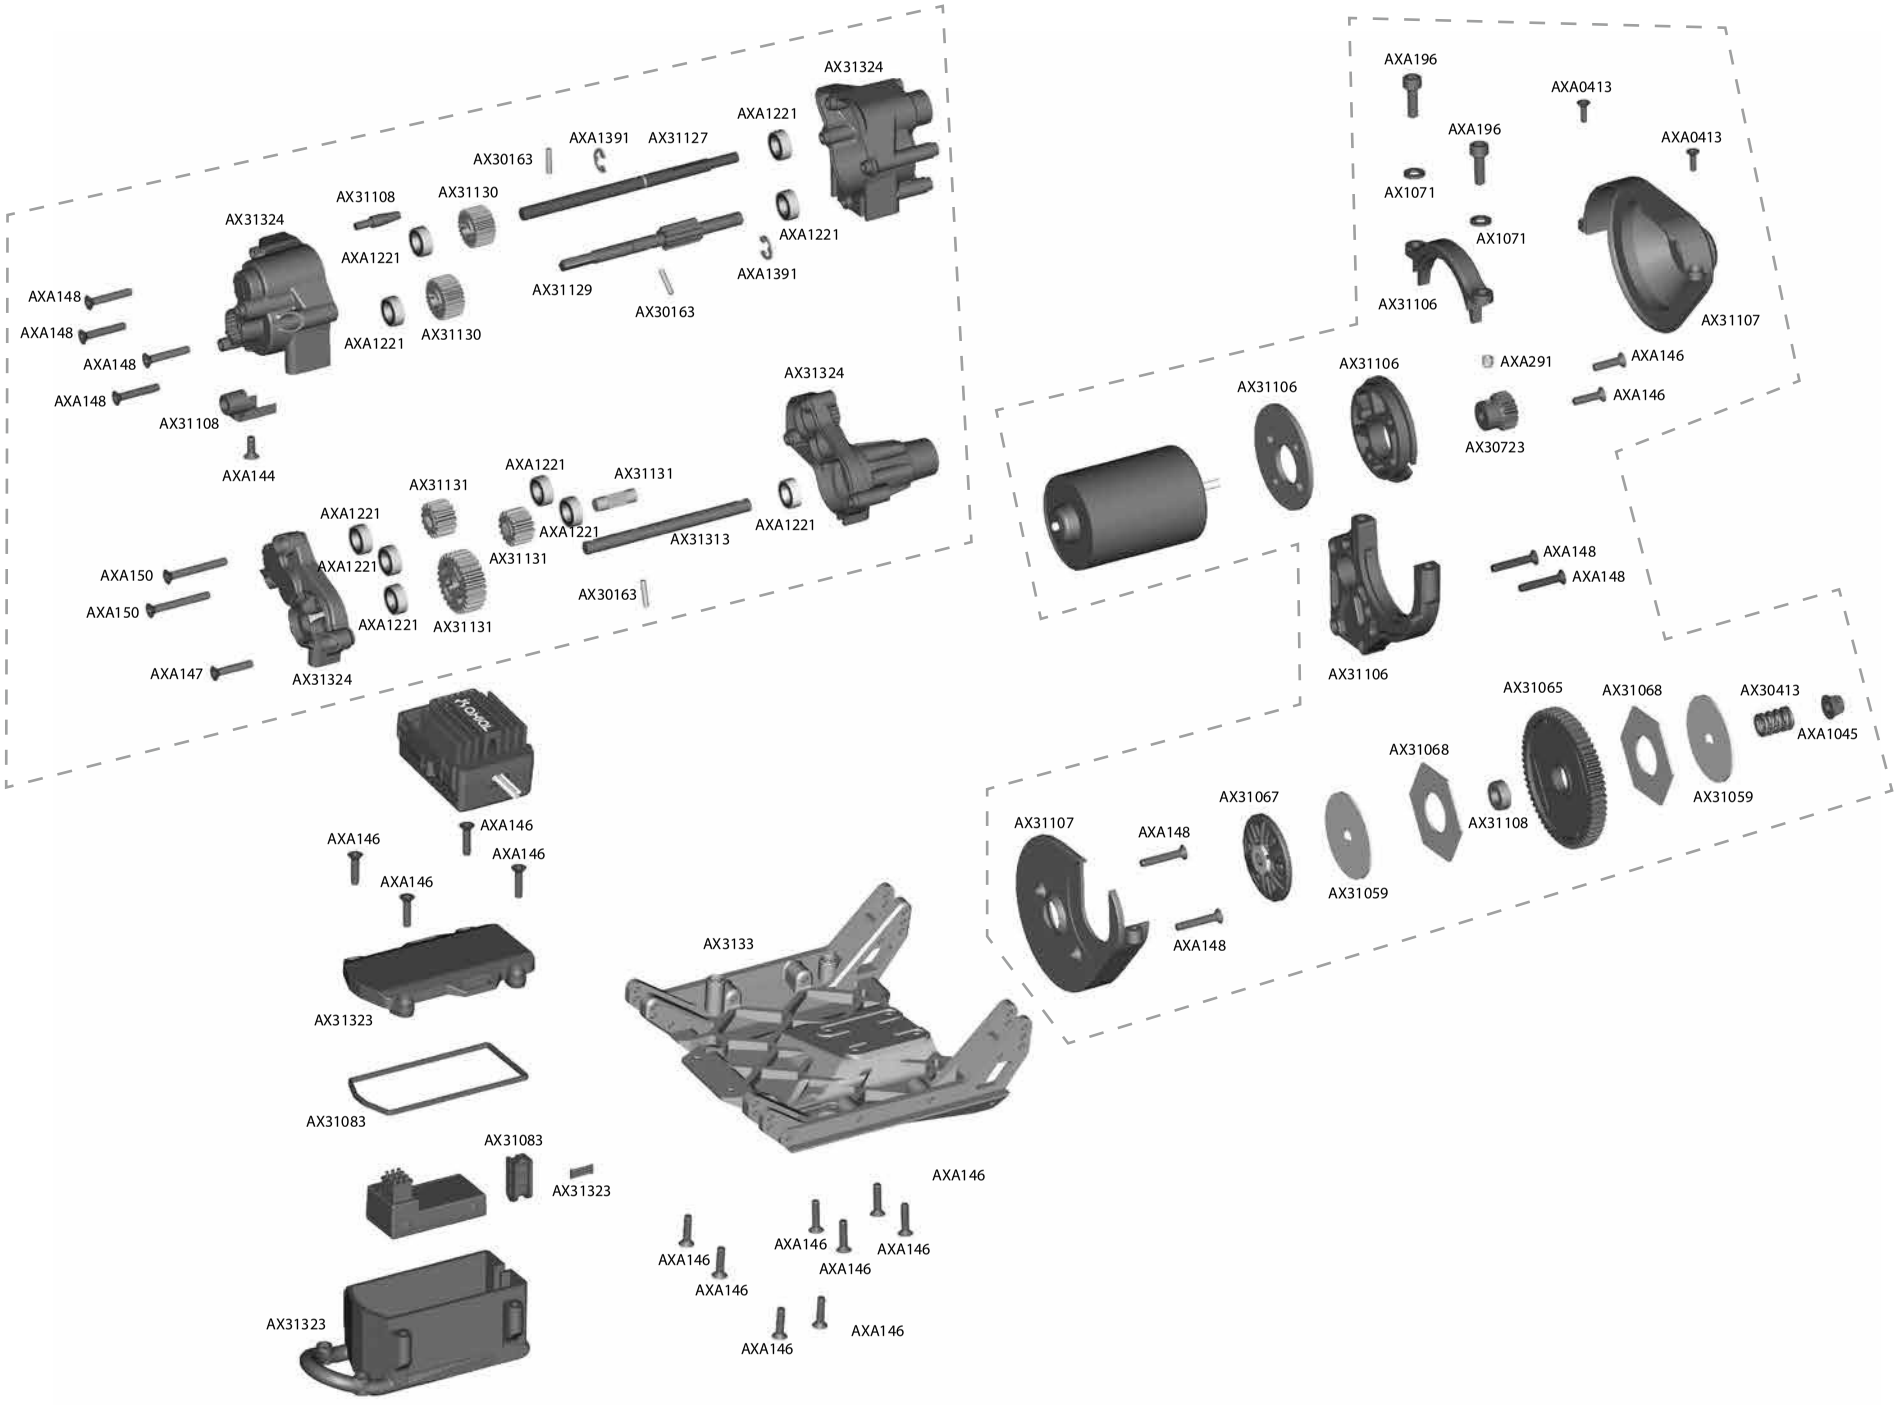
AX31324
AXA1221
AXA1391
AX31127
AX30163
AX31108
AX31130
AXA148
AXA1221
AX31129
AXA1391
AX30163
AXA1221
AX31130
AXA148
AXA148
AXA148
AX31108
AXA144
AX31324
AXA1221
AX31131
AXA1221
AX31131
AXA1221
AXA1221
AXA150
AXA150
AXA1221
AX31131
AXA147
AX31324
AX30163
AXA196
AXA0413
AXA196
AXA0413
AX1071
AX1071
AX31106
AX31107
AX31106
AXA291
AXA146
AXA146
AX30723
AX31106
AXA148
AXA148
AX31065
AX31068
AX30413
AXA1045
AX31068
AX31059
AX31107
AXA148
AX31067
AX31108
AX31059
AXA148
AXA146
AXA146
AXA146
AXA146
AX31323
AX3133
AX31083
AX31083
AX31323
AXA146
AXA146
AXA146
AXA146
AXA146
AXA146
AXA146
AX31323

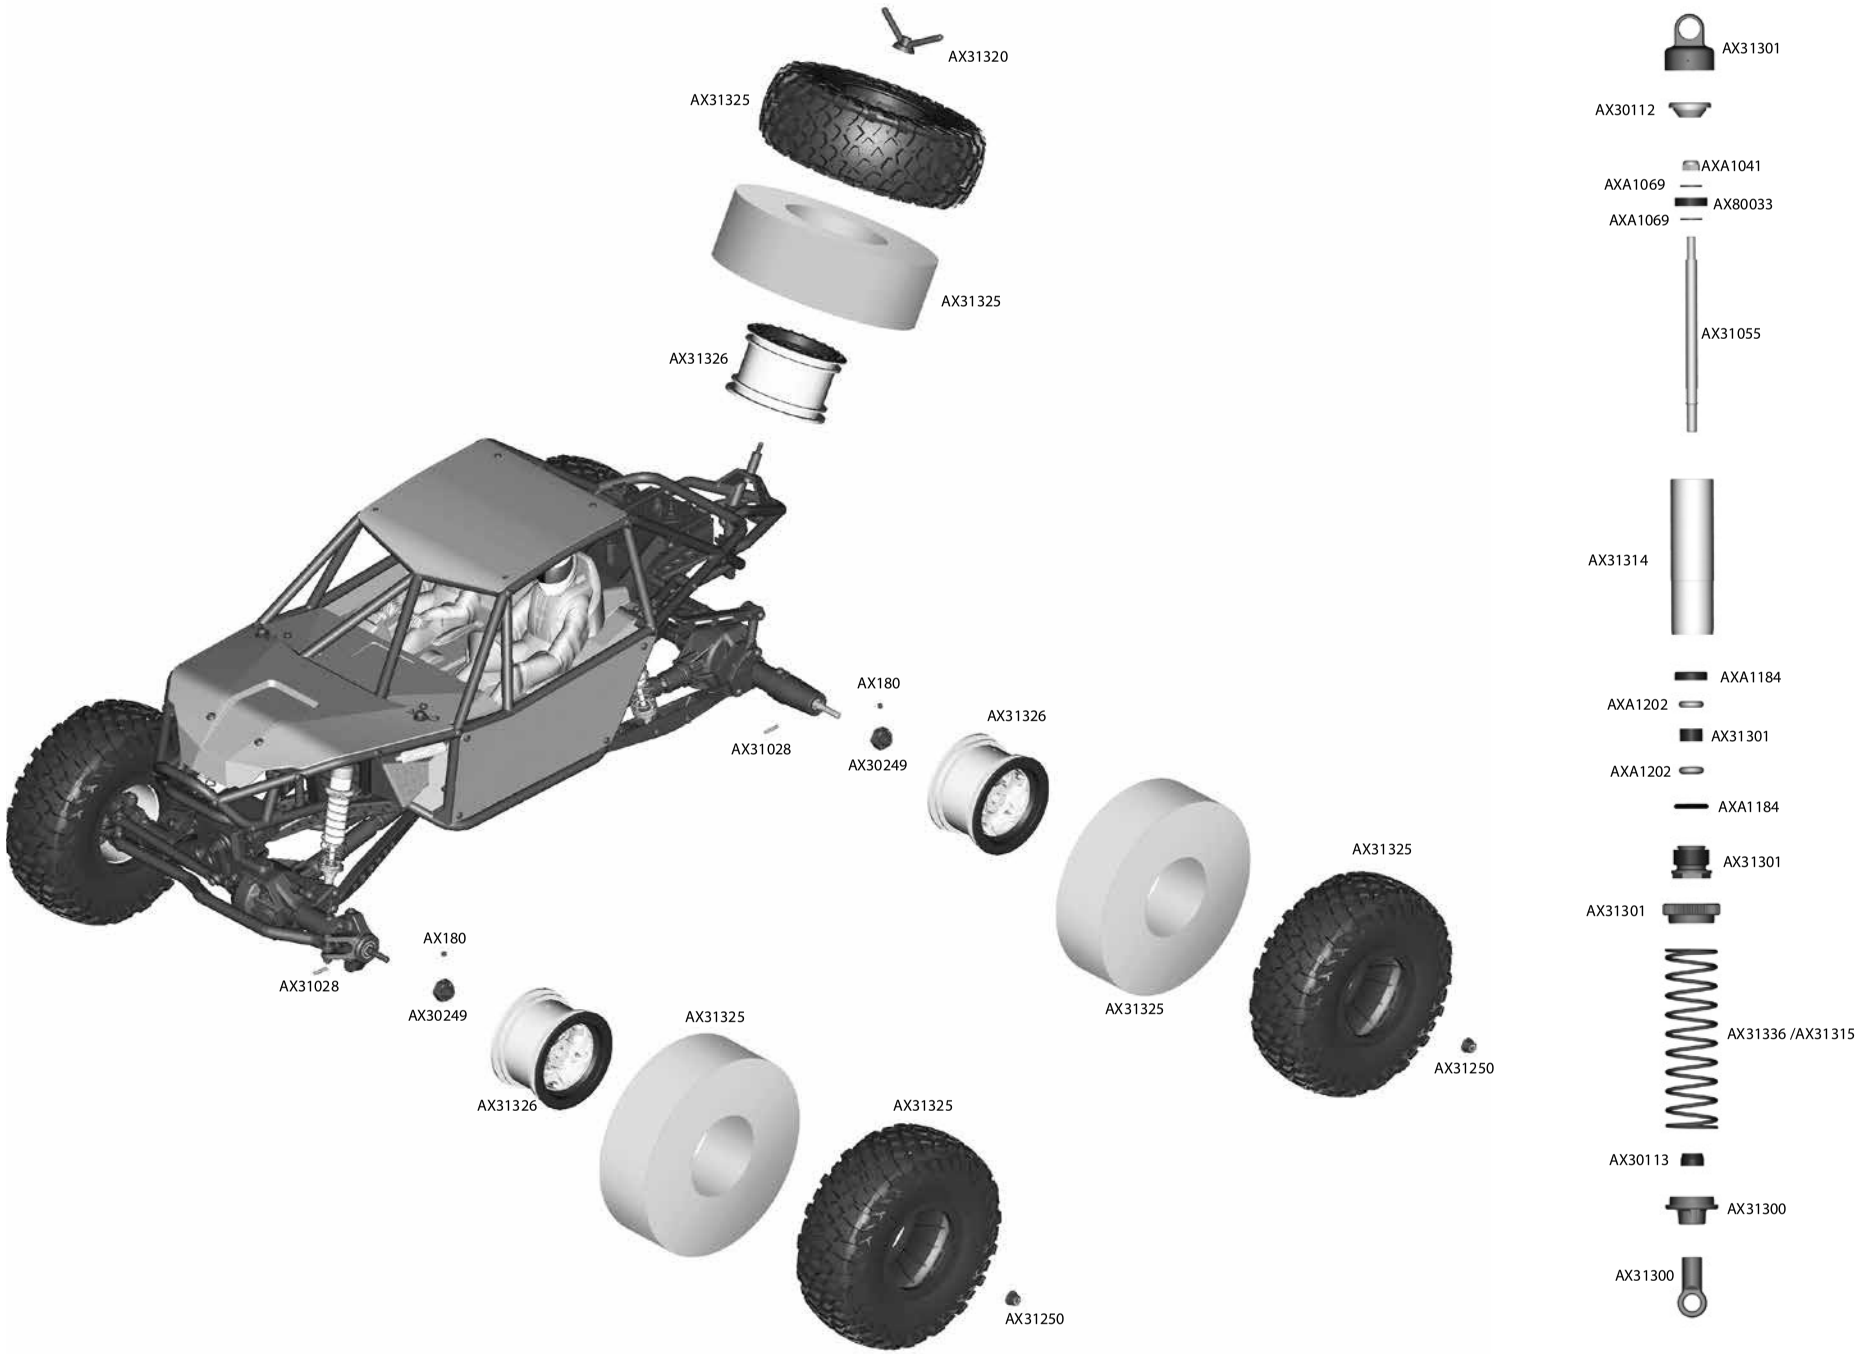

www.modellmarkt24.ch
www.modellmarkt24.de

Parts List

Part #	Description
AX30113	Rubber Bump Stop 3.6x7x4 (6pcs)
AX30155	Shock Shaft 3x59.5 (2pcs)
AX30163	Pin 2.0x10mm (6pcs.)
AX30368	Axle 6x39mm (2pcs)
AX30385	Diff Gasket 16x25x0.5mm (2pcs)
AX30392	Bevel Gear Set (38/13)
AX30408	Input Shaft 5x29mm (2pcs)
AX30413	Slipper spring 8.5x12 165 lbs/in - Black (2pcs)
AX30419	AR60 OCP Front Dogbone Set
AX30429	12mm Aluminum Hub (Black) (4pcs)
AX30450	Flange Pipe 3x4.5x5.5 (4pcs)
AX30463	WB8 Universal Joint Rebuild Kit (2pcs)
AX30500	Heavy Duty Locker (2pcs)
AX30723	Pinion Gear 32P 12T - Steel (3mm Motor Shaft)
AX30776	AR60 OCP Rear Axle Set (2pcs)
AX31028	Pin 2.0x11mm (6pcs)
AX31049	Helmet Set (Black)
AX31059	Slipper Plate Washer 33x1mm (2pcs)
AX31065	Spur Gear 32P 64T
AX31067	Slipper Plate (2pcs)
AX31068	Slipper Pad 32.8x15.2x1mm (2pcs)
AX31083	Radio Box Seals
AX31106	2-Speed Hi/Lo Transmission Motor Mount
AX31107	2-Speed Hi/Lo Transmission Spur Gear Cover
AX31108	2-Speed Hi/Lo Transmission Case
AX31109	Yeti™ Rear 4 Link Set
AX31114	WB8-HD Driveshaft
AX31121	M4x12mm Cap Head (Black) (10pcs)
AX31125	Yeti™ Fuel Cell
AX31127	2-Speed Hi/Lo Transmission Top Shaft (5x91mm)
AX31129	2-Speed Hi/Lo Transmission Bottom Shaft (5x75mm)
AX31130	High Speed Transmission Gear Set (48P 26T, 48P 28T)
AX31148	WB8-HD Driveshaft Coupler Set
AX31185	M3x10mm Hex Socket Flat Head (Black) (10pcs)
AX31250	M4 Serrated Nylon Lock Nut (Black) (10pcs)
AX31300	10mm Shock Parts Tree 2 (Blue)
AX31301	10mm Shock Caps Parts Tree (Blue)
AX31312	35T Electric Motor
AX31313	Transfer Case Output Shaft (5x69mm)
AX31314	Aluminum Shock Body 12x47.5mm (Clear Anodized) (2pcs)
AX31315	Spring 14x70mm 1.43 lbs/in - Purple (2pcs) (Blue Springs)
AX31316	AR60 Double Shear Steering Knuckle Set
AX31317	RR10 AR60 Axle Component Set
AX31318	RR10 Battery Tray Chassis Components
AX31319	RR10 Center Cage
AX31320	RR10 Rear Cage Components
AX31321	RR10 Cage Lower Rails
AX31322	RR10 Cage Sides (Left and Right)
AX31323	RR10 Electronics Box
AX31324	RR10 Transfer Case
AX31325	2.2 BFGoodrich Baja T/A KR2 Tires - R35 Compound (2pcs)
AX31326	2.2 Walker Evans Wheels - Black (2pcs)
AX31327	RR10 Bomber Body - .040" (Clear)
AX31328	RR10 Interior Ser - .040" (Clear)
AX31332	RR10 Battery Tray Chassis Components 2
AX31333	RR10 Skid Plate
AX31336	Spring 14x70mm 3.27 lbs/in - Yellow (2pcs) (Blue Springs)
AX80002	Diff Case -Small
AX80006	Servo Set
AX80018	Hardware Parts Tree
AX80033	10mm Shock Parts Tree 1
AX80062	XR10 C Hub Carrier Set
AX80069	AR60 OCP Axle Housing
AX80071	AR60 OCP Straight Axle Adapter
AX80072	AR60 OCP 4-Link Mount
AX80073	AR60 OCP Steering Link
AX80083	Wraith Links Set
AXA0023	M2.6x8mm Cap Head (Black) (10pcs)
AXA0109	M3x10mm Oversized Flat Hex Socket (Black) (10pcs)
AXA0113	M3x6mm Hex Socket Button Head (Black) (10pcs)
AXA0147	M3x16mm Hex Socket Flat Head (Black) (10pcs)

Part #	Description
AXA015	M2x10mm Cap Head (Black) (10pcs)
AXA0187	M3x20mm Set Screw (Black) (10pcs)
AXA0286	Screw Shaft M4x2.5x12mm (6pcs)
AXA0413	M2.6x8mm Hex Socket Tapping Flat Head (Black) (10pcs)
AXA0439	M3x20mm Hex Socket Tapping Button Head (Black) (10pcs)
AXA087	M3x16mm Cap Head (Black) (10pcs)
AXA091	M3x30mm Cap Head - Black (10pcs)
AXA1041	M2.5 Nylon Locking Hex Nut - Silver (10pcs)
AXA1045	M4 Nylon Lock Nut (Black) (10pcs)
AXA1052	M3 Thin Nylon Locking Hex Nut (Black)
AXA1053	M3 Nylon Locking Hex Nut (Black) (10pcs)
AXA1059	6mm Body clip (Black) (10pcs)
AXA1069	Washer 2.7x6.7x0.5 (10pcs)
AXA1070	Washer 3x6x0.5 (10pcs)
AXA1071	Washer 4x8x0.5mm (10pcs)
AXA114	M3x8mm Hex Socket Button Head (Black) (10pcs)
AXA115	M3x10mm Hex Socket Button Head (Black) (10pcs)
AXA116	M3x12mm Hex Socket Button Head - Black (10pcs)
AXA117	M3x15mm Hex Socket Button Head (Black) (10pcs)
AXA118	M3x18mm Hex Socket Button Head - Black (10pcs)
AXA1184	O-Ring 7.5x1.5mm (S8) - (10pcs)
AXA119	M3x20mm Hex Socket Button Head (Black) (10pcs)
AXA1202	O-Ring 3.5x2mm (10pcs)
AXA121	M3x30mm Hex Socket Button Head (Black) (10pcs)
AXA1221	Bearing 5x11x4mm (2pcs)
AXA1230	Bearing 10x15x4mm
AXA1391	E4 e-clip (10pcs)
AXA1393	E2.5 e-clip (10pcs)
AXA144	M3x8mm Hex Socket Flat Head (Black) (10pcs)
AXA146	M3x12mm Hex Socket Flat Head - Black (10pcs)
AXA148	M3x18mm Hex Socket Flat Head (Black) (10pcs)
AXA150	M3x25mm Hex Socket Flat Head (Black) (10pcs)
AXA180	M3x3mm Set Screw (Black) (10pcs)
AXA186	M3x16mm Set Screw (Black) (10pcs)
AXA291	M4x4mm Set Screw (Black) (6pcs.)
AXA436	M3x12mm Hex Socket Tapping Button Head (Black) (10pcs)
AXA441	M3x30mm Hex Socket Tapping Button Head (Black) (10pcs)

www.modellmarkt24.ch; www.modellmarkt24.de

Option Parts

Part #	Description
AX08061	2.2 VWS Beadlock Wheels (Black) (2pcs) (Fits XR10)
AX08069	2.2 VWS Beadlock Rings (Black) (2pcs)
AX08132	2.2 VWS Machined Beadlock Rings (Orange) (2pcs)
AX08133	2.2 VWS Machined Beadlock Ring (Grey) (2pcs)
AX08135	2.2 Raceline Renegade Wheels - 41mm Wide (Black) (2pcs)
AX08137	2.2 Raceline Renegade Wheels - 41mm Wide (Chrome/Black) (2pcs)
AX08141	2.2 Trail Ready HD Series Beadlock w/Slim Ring - IFD™ Wheels - Black(2pcs)
AX08142	2.2 Trail Ready HD Series Beadlock w/Slim Ring - IFD™ Wheels - Chrome/Black(2pcs)
AX12015	2.2 Ripsaw Tires - R35 Compound (2pcs)
AX12021	2.2 BFGoodrich Krawler T/A - R35 Compound (2pcs)
AX12022	2.2 Maxxis Trepador Tires - R35 Compound (2pcs)
AX24003	20T Electric Motor
AX24004	Axial 27T Electric Motor
AX24007	Axial 55T Electric Motor
AX24010	Brushless 2900KV Electric Motor
AX24251	Axial NVS - Night Visions System
AX24252	Axial Double LED Light String (White LED)
AX24253	Axial Double LED Light String (Red LED)
AX24254	Axial Double LED Light String (Orange LED)
AX24255	Axial Single LED Light String (White LED)
AX24256	Axial 5 LED Light String (White LED)
AX24257	Simple LED Controller w/LED lights (4 white and 2 Red)
AX24258	4 LED Light String (White LED)
AX24259	Axial AE-2 Forward/Reverse ESC w/Drag Brake
AX24260	AE-3 Vanguard ESC
AX30091	67-90mm Shock Set - 10mm Piston (2pcs)
AX30092	Axial 72-103mm Shock Set - 10mm Piston (2pcs)
AX30110	Axial Aluminum 13mm Aluminum Preload Collar (2pcs)
AX30111	Axial Aluminum Shock Cap (2pcs)
AX30120	Axial Aluminum Shock Body 12x47.5mm (2pcs)
AX30155	Shock Shaft 3x59.5 (2pcs)
AX30218	Spring 14x70mm 2.07 lbs/in - Super Soft (Red) (2pcs)
AX30219	Spring 14x70mm 2.47 lbs/in - Soft (White) (2pcs)
AX30220	Spring 14x70mm 2.85 lbs/in - Medium (Green) (2pcs)
AX30221	Spring 14x70mm 3.27 lbs/in - Firm (Yellow) (2pcs)
AX30222	Spring 14x70mm 3.55 lbs/in- Super Firm (Blue) (2pcs)
AX30223	Spring 14x70mm 1.04 lbs/in - Black (2pcs)
AX30224	Spring 14x70mm 1.43 lbs/in - Purple (2pcs)
AX30225	Spring 14x70mm 1.75 lbs/in - Orange (2pcs)
AX30395	Heavy Duty Bevel Gear Set - 38T/13T
AX30401	Heavy Duty Bevel Gear Set - 36T/14T
AX30402	Heavy Duty Bevel Gear Set - 43T/13T
AX30465	Machined hi-clearance Links - Green (2pcs)
AX30468	Machined hi-clearance Links - Orange (2pcs)
AX30469	Machined Hi-Clearance Links - Grey (2pcs)
AX30545	2.2 Internal Wheel Weight Ring 57g/2oz (2pcs)
AX30546	2.2 Internal Wheel Weight Insert 21g/0.75oz (4pcs) (for use with AX30545)
AX30722	Pinion Gear 32P 11T (3mm shaft)
AX30723	Pinion Gear 32P 12T (3mm shaft)
AX30724	Pinion Gear 32P 13T (3mm shaft)
AX30725	Pinion Gear 32P 14T (3mm shaft)
AX30726	Pinion Gear 32P 15T (3mm shaft)
AX30727	Pinion Gear 32P 16T (3mm shaft)
AX30728	Pinion Gear 32P 17T (3mm shaft)
AX30741	Spur Gear 32P 48T
AX30742	Spur Gear 32P 50T
AX30743	Spur Gear 32P 52T
AX30744	Spur Gear 32P 54T
AX30762	XR10 Aluminum C-Hub Carrier (Black) (2pcs)
AX30789	AR60 OCP Aluminum Straight Axle Hub Carrier (2pcs)
AX30790	Machined Heavy Duty Aluminum Straight Link 101mm - Grey (2pcs)
AX30791	Hi-Clearance Threaded Aluminum Link 7x85mm - Grey (2pcs)
AX30829	AR60 OCP Machined Low-Profile Differential Cover
AX30830	Axial AR60 OCP Machined Link Mounts
AX30831	AR60 OCP™ Front Axle Set (Complete)
AX30834	Aluminum Servo Horn 23T
AX30835	Aluminum Servo Horn 24T
AX30836	Aluminum Servo Horn 25T
AX30851	Steel Spur Gear 32P 48T
AX30852	Steel Spur Gear 32P 50T
AX30853	Steel Spur Gear 32P 52T

Part #	Description
AX30854	Steel Spur Gear 32P 54T
AX31009	2-Speed Hi/Lo Servo Saver Set
AX31047	Brushless 3150KV Electric Motor
AX31069	Metal Spur Gear 32P 68T
AX31077	2.2 Falken Wildpeak M/T - R35 Compound (2pcs)
AX31097	3 Port High Output LED Controller
AX31098	8 LED Light String (White LED)
AX31118	2.2 Walker Evans Wheels - IFD™ Wheels - Black(2pcs)
AX31136	Icon 87-125mm Aluminum Shock Set - 10mm Piston (2pcs)
AX31144	AE-5 Waterproof Forward/Reverse ESC w/Drag Brake
AX31152	Universal Rigid Light Bar Set
AX31156	Machined Adjustable Motor Mount (Hard Anodized)
AX31160	Steel Spur Gear 32P 68T
AX31161	Steel Spur Gear 32P 64T
AX31162	Steel Spur Gear 32P 60T
AX31163	Steel Spur Gear 32P 56T
AX31164	Machined Slipper Plate (Hard Anodized) (2pcs)
AX31171	Icon 72-103mm Aluminum Shock Set - 10mm Piston (2pcs)
AX31172	Icon 67-90mm Aluminum Shock Set - 10mm Piston (2pcs)
AX31173	Icon 93-137mm Aluminum Shock Damper Set - 10mm Piston (2pcs)
AX31178	2.2 Method Beadlock Wheels - IFD™ Wheels - Black(2pcs)
AX31181	Yeti Transmission 2-Speed Hi/Lo Components
AX31184	Hi/Lo Transmission Gear Set
AX31188	Icon Aluminum Shock Body 12x47.5mm (2pcs)
AX31191	Icon Shock Cap (12mm) (2pcs)
AX31244	Upper Link Plate Set (Aluminum) (4pcs)
AX31245	Lower Link Plate Set (Aluminum) (4pcs)
AX31250	M4 Serrated Nylon Lock Nut (Black) (10pcs)
AX31329	35T Trail Breaker Electric Motor (Rebuildable)
AX31330	55T Trail Breaker Electric Motor (Rebuildable)
AX31331	RR10 Rear Sway Bar Set (Soft)
AX80045	Axial Light Bucket Set (Black)
AX80047	Interior Details Parts Tree - Chrome
AX80049	Axial LED Lens Set - Yellow/Clear (4pcs)
AX80085	Universal Mount 5 Bucket Light Bar (Black)
AX80086	Light Bar Lenses (Clear) (5pcs)
AX80131	Helmet Set
AX8091	Axial 2.2 Rockster Beadlocks (Black)
AX8092	Axial 2.2 Rockster Beadlocks (Chrome)
AX8095	Axial 2.2 Rockster Beadlocks (Black Chrome)
AX8097	2.2 8 Hole Beadlocks (Black)
AX8112	2.2 Beadlock Ring - Grey (2pcs)
AX8117	2.2 Rock Beadlock Ring - Grey (2pcs)
AXA1076	Cap Head Washer M3x10mm (4pcs)
AXA1101	Cone Washer 3x6.9x2mm (6pcs)
AXA1104	Cone Washer 3x6.9x2mm - Orange (6pcs)
AXA1105	Cone Washer 3x6.9x2mm - Grey (6pcs)
AXA1331	Flanged Ball 3x5.8x7mm (6pcs)
AXA1412	0.5x6mm Spacer - Grey (6pcs)
AXA1413	1x6mm Spacer - Grey (6pcs)
AXA1414	2x6mm Spacer - Grey (6pcs)
AXA1415	3x6mm Spacer - Grey (6pcs)
AXA1416	4x6mm Spacer - Grey (6pcs)
AXA1417	5x6mm Spacer - Grey (6pcs)
AXA1418	6x6mm Spacer - Grey (6pcs)
AXA1419	7x10mm Post - Grey (2pcs)
AXA1420	7x15mm Post - Grey (2pcs)
AXA1421	7x20mm Post - Grey (2pcs)
AXA1422	7x25mm Post - Grey (2pcs)
AXA1423	7x30mm Post - Grey (2pcs)
AXA1424	7x35mm Post - Grey (2pcs)
AXA1425	7x40mm Post - Grey (2pcs)
AXA1426	7x45mm Post - Grey (2pcs)
AXA1427	7x50mm Post - Grey (2pcs)
AXA1428	7x55mm Post - Grey (2pcs)
AXA1429	7x60mm Post - Grey (2pcs)
AXA1430	7x65mm Post - Grey (2pcs)
AXA1431	7x70mm Post - Grey (2pcs)

www.modellmarkt24.ch; www.modellmarkt24.de

NOTES

www.modellmarkt24.ch; www.modellmarkt24.de

NOTES

www.modellmarkt24.ch; www.modellmarkt24.de





EXPLORE

facebook.com/axialinc | twitter.com/axialrc | youtube.com/axialvideos | flickr.com/axialrc

axial®

www.axialracing.com

BFGoodrich® Tires and Baja T/A® KR2 Trademarks are used under License from Michelin
Odyssey Battery trademark(s) is/are the property of EnerSys and affiliates

AX90048-1001

www.modellmarkt24.ch; www.modellmarkt24.de